# Drinking Water Plant Operator Certification Training



# Module 25: Hypochlorite

**Revised December 2013** 

This course includes content originally developed by the Pennsylvania Department of Environmental Protection (Pa. DEP) in cooperation with the following contractors, subcontractors, or grantees:

The Pennsylvania State Association of Township Supervisors (PSATS)
Gannett Fleming, Inc.
Dering Consulting Group
Penn State Harrisburg Environmental Training Center

#### **Topical Outline**

#### Unit 1 - Background and Properties

- I. Basic Information
  - A. History of Use
  - B. Uses
  - C. Hypochlorite Production
  - D. AWWA Standard Product Specification
- II. Properties
  - A. Chemistry
  - B. Concentration of Available Free Chlorine
  - C. Stability
  - D. Vapor Pressure

#### Unit 2 – Chemical Handling, Storage and Safety

- I. Storage and Handling
  - A. Product Deliveries and Storage
  - B. Storage Vessels
  - C. Product Dilution
  - D. Storage Rooms
- II. Safety
  - A. Material Safety Data Sheets
  - B. Safety Equipment
  - C. Spill Handling
  - D. OSHA Requirements

#### Unit 3 - Math Principles and Process Calculations

- I. Math terms, principles and rules for solving equations
- II. Unit Cancellation Steps
- III. Calculations
  - A. Calculation changing % concentrations of a chemical
  - B. Dosage/Feed rate/Flow
  - C. Chlorine Demand or Dose
  - D. CT

#### Unit 4 - Chemical Feed

- I. Feed Points and Purpose
  - A. Regulatory Requirements
  - B. Chlorination Mechanics and Terminology
  - C. Breakpoint Chlorination
- II. Hypochlorite Feed Equipment, Operation and Maintenance
  - A. Sodium Hypochlorite
  - B. Hypochlorite Feed Equipment
  - C. Calcium Hypochlorite
  - D. On-Site Generated Sodium Hypochlorite
  - E. Hypochlorite Feed System Operation
- III. Calcium Hypochlorite
  - A. Chemical Feed Equipment
  - B. Chemical Strength, Pumping and Dilution
  - C. Maintenance
- IV. On-Site Generated Sodium Hypochlorite
  - A. Chemistry
  - B. System Components
  - C. Chemical Strength, Pumping and Dilution
- V. Chemical Feed Control and Monitoring
  - A. Chlorine Residual Monitoring
  - B. Storage Monitoring
  - C. Chemical Feed Control

#### **Appendix**

MSDS for sodium hypochlorite

Additional Hypochlorite Practice Math Problems

## Unit 1 – Background and Properties

#### **Learning Objectives**

- Outline the history of hypochlorite use.
- List the uses of hypochlorite.
- Explain how hypochlorite is produced.
- List and explain six properties of hypochlorite.

#### History of Use

- During the early history of water chlorination, the only sources of chlorine were dry chlorinecontaining compounds and sodium hypochlorite bleach solutions. Initially, the following problems occurred:
  - The poor stability and variable effective chlorine content resulted in operating difficulties.
  - Feeder equipment was crude, therefore, yielding erratic results.
- In 1909, liquid chlorine became commercially available and the use of hypochlorite for water chlorination gradually decreased in popularity.
- In 1928, the commercial availability of calcium hypochlorite resulted in renewed use.

#### Uses



**Hypochlorite** refers to the various salts of hypochlorous acid commonly used in water treatment for disinfection, oxidation, and taste and odor control. This term is commonly used interchangeably to refer to the liquid form, sodium hypochlorite, and the solid form, calcium hypochlorite.

#### Disinfection

- Chlorine compounds are added to water to destroy or inactivate disease-producing (pathogenic) organisms.
- Disinfection differs from sterilization, which is the destruction of all living organisms.

#### Oxidation

Hypochlorites are commonly used to oxidize iron, manganese, organic matter, cyanide, and sulfide for subsequent removal.

#### Taste and Odor Control

Removal (oxidization) of chemicals and organic matter helps to control tastes and odors in the treated water supply.

#### **Hypochlorite Production**

#### **Manufactured Products**

There are two types of hypochlorites that are manufactured: liquid sodium hypochlorite and granular calcium hypochlorite. These will be discussed in more detail later in this unit.

#### **On-Site Generation**

Hypochlorites can be generated on site. This will be discussed in greater detail in Unit 4 of this module.

#### **AWWA Standard Product Specification**

The American Water Works Association (AWWA) has established Standard ANSI / AWWA B300-99, covering the hypochlorite chemicals for use in the treatment of water supplies. The standard provides the minimum requirements for hypochlorites, including physical, chemical, packaging, shipping and testing requirements. Plant operators should verify that the chemicals used comply with this standard.

#### Chemistry

- When chlorine is dissolved in water it forms hypochlorous acid.
- Hypochlorus acid (HOCl) dissociates into hydrogen (H+) and hypochlorite (OCl-) ions.
  - ▶ The reaction is almost instantaneous.
  - The reaction is dependent on temperature and pH.
  - ▶ The reaction is reversible:

$$HOCI \leftrightarrow H^+ + OCI^-$$

- Together, the hypochlorus acid and hypochlorite ions are considered the "Free Chlorine" available for disinfection. This free chlorine is the most effective disinfectant form of chlorine. We'll discuss this more in Unit 4.
- Hypochlorous acid is a more effective disinfectant than hypochlorite, so the reaction should be kept in favor of the left side of the equation. This is dependent on pH and temperature.
  - At pH below 6, hypochlorous acid is weak and dissociates poorly.
  - Between pH 6 and 8.5, a sharp change from undissociated HOCl to almost complete dissociation occurs.
  - pH higher than 8.5 hypochlorite predominates, which is not as effective of a disinfectant.
- The normal pH of water supplies is within the range where both hypochlorous acid and hypochlorite ion exist as indicated in the following figure.
  - Solutions of hypochlorites contain excess alkali, which tends to increase pH.

#### Distribution of HOCI and OCI- in Water

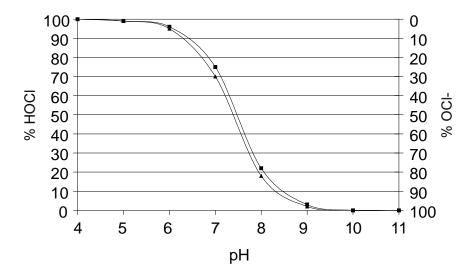


Figure 25.1 The Distribution of HOCl and OCl in Water

The disinfection effectiveness of liquid chlorine will decrease with pH.

Figure 25.2 shows how the effectiveness of chlorine decreases as the pH increases.

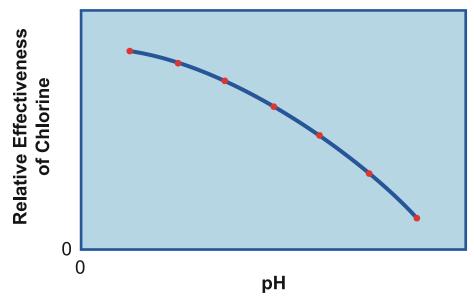


Figure 25.2 The Relationship Between pH and Disinfection When Using Chlorine.

The disinfection effectiveness of liquid chlorine will increase with temperature.

Figure 25.3 shows how the effectiveness of chlorine increases as temperature increases.

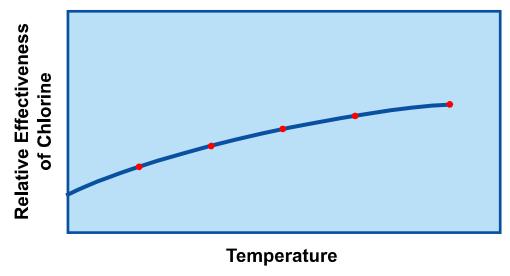


Figure 25.3 The Relationship Between Temperature and Disinfection When Using Chlorine.

#### Sodium Hypochlorite

- Sodium hypochlorite is a clear, light yellow-green liquid and is supplied in various strengths.
  - ▶ Common household laundry bleach is 5.25% available chlorine by weight.
  - ► Commercial strength used for water disinfection is 12 15% available chlorine by weight. (12.5% solution strength is common).
- It is strongly alkaline and corrosive.
- Sodium hypochlorite has a strong chlorine odor.
- The chemical formula for sodium hypochlorite is NaOCl.
- The properties of sodium hypochlorite are:
  - ▶ Boiling point: 110° C (230° F)
  - ▶ Specific Gravity: 1.19 (Specific Gravity of Water = 1.0)
  - ▶ pH: 9.0 to 12.0
- Reaction in water:

$$NaOCI + H_2O \rightarrow Na^+ + OCL^- + H_2O$$

#### On-Site Generated Liquid Sodium Hypochlorite

A weak solution of liquid sodium hypochlorite can be generated on-site.

An electrical charge is applied to a salt brine solution to generate a weak sodium hypochlorite solution. This reaction produces hydrogen gas, which dissipates into the atmosphere.

- The following requirements must be met to generate hypochlorite on-site:
  - ▶ Power: 2.5 KWH/lb Cl
  - ▶ Salt: 3 lb/lb Cl
  - ▶ Water: 15 gal/lb Cl, softened to less than 17 mg/L total hardness
- The properties of on-site generated hypochlorite are:
  - ▶ 0.7 to 0.9% available chlorine
  - ▶ Solution pH: 9.1 to 9.3

#### Calcium Hypochlorite - Ca(OCI)<sub>2</sub>

- Calcium Hypochlorite has 65 to 70% available chlorine.
  - ▶ Every 100 pounds of Ca(OCl)<sub>2</sub> contains 65 70 pounds of available chlorine.
  - It is readily soluble in either warm or cold water.
  - Very strong (concentrated) solutions can be prepared. Usually a solution containing 1 to 3 % of available chlorine is prepared. 125 pounds per 1000 gallons of water makes a 1% solution.
- Calcium hypochlorite is a white free-flowing granular powder or solid cake.
  - Its common name is high test hypochlorite (HTH), which is commonly used for swimming pool chlorination.
  - It is stable and can be stored for long periods of time with only a small loss of strength.
- It is readily soluble in either warm or cold water.
  - Very concentrated solutions can be prepared.
  - Solutions are strongly alkaline and corrosive.
- Calcium hypochlorite has a strong chlorine odor.
- The properties of calcium hypochlorite are as follows:
  - Specific Gravity: 2.35 at 20° C (S.G. of Water = 1.0)
  - ▶ pH: 11.5 (5% solution)
- Reaction in water:

$$Ca(OCI)_2 + 2 H_2O \rightarrow 2 HOCI + Ca(OH)_2$$

#### Stability

#### Liquid Sodium Hypochlorite

- The stability of hypochlorite solutions is greatly affected by concentration, heat, light, time, and the presence of heavy metals.
  - ▶ The higher the concentration, the faster the rate of deterioration.
  - The most stable solutions are of low concentration. On-site generated solution at 1% is more stable than bulk purchased solution at 12%.
  - The higher the temperature, the faster the rate of deterioration.

rable 25.1 The Effects of Temperature of Various Concentrations			
Percent Available	Half-life (days)		
Chlorine	140 °F	77 °F	59 °F
10.0	3.5	220	800
5.0	13.0	790	5000
2.5	28.0	1800	
0.5	100.0	6000	

Table 25.1 The Effects of Temperature of Various Concentrations

- To maintain a somewhat constant solution concentration, quantities should be used within 30 days and stored at 60 to 70 °F.
- Solutions exposed to light deteriorate faster than those kept in darkness. The half-life of 10 to 15 percent solution will be reduced about 3 or 4 times when exposed to light.
- The presence of iron, copper, nickel, or cobalt catalyzes the rate of deterioration; therefore, piping systems should be plastic or other non-metallic material to prevent active corrosion of iron, copper or brass materials.
- In summary: The most stable hypochlorite solutions are those with low hypochlorite concentration, a pH of 11 and low iron, copper, or nickel content, stored in the dark at low temperature.

#### Calcium Hypochlorite

- Dry material is relatively stable under normal atmospheric conditions and will lose 3 to 5 percent available chlorine per year.
  - Reduce deterioration by maintaining a 30 to 60 day stock supply of dry material and mixing fresh solution daily.
- Decomposition is exothermic, meaning it gives off heat. Decomposition proceeds rapidly if heated to 350° F.
  - Many fires of spontaneous origin have been caused by improperly stored calcium hypochlorite.
- Never store calcium hypochlorite where it may be subject to heat or allowed to contact organic material.
  - Calcium hypochlorite releases chlorine fumes when exposed to heat. It may build up pressure in sealed storage containers if containers are exposed to sunlight or other heat sources.
- It should be stored in cool, dry places, isolated from other chemicals since moisture contributes to its deterioration and spontaneous reactions may occur with organic materials and other oxidizable materials.

#### Vapor Pressure

- All hypochlorite solutions, whether purchased liquid sodium hypochlorite or plant prepared solutions of calcium hypochlorite, will release oxygen gas as the solution decomposes.
- Provisions must be included in the chemical feed system to vent this gas to prevent air binding of the feed lines.
- Care must be taken to prevent trapping the solution between two closed valves since the buildup of pressure may rupture the piping system.



#### Key points for Unit 1 – Background and Properties

- Chlorine compounds are added to water to destroy or inactivate pathogenic organisms.
- The disinfection effectiveness of liquid chlorine will increase with temperature and decrease with pH.
- Hypochlorites can be used to oxidize dissolved metals and to help control taste and odor problems.
- # Hypochlorites are provided as liquid sodium hypochlorite or granular calcium hypochlorite.
- Sodium hypochlorite is a clear light yellow-green liquid with a chlorine odor.
- ♣ Sodium hypochlorite used for water disinfection is 12 15% available chlorine by weight. (12.5% solution strength is common).
- Concentration, heat, light, time, and the presence of dissolved heavy metals can affect the stability of hypochlorite solutions.
- Calcium hypochlorite is a white free-flowing granular powder or a solid cake.
- Calcium hypochlorite is readily soluble in either warm or cold water. However, if it is kept dry and cool, it can be stored for long periods of time.
- Calcium hypochlorite will lose 3 to 5 percent of available chlorine per year. A 30 to 60 day stock supply is often recommended to keep chlorine losses within acceptable limits.
- **♣** Calcium Hypochlorite has 65 to 70% available chlorine.



#### Exercise for Unit 1 – Background and Properties

1. List and explain two uses of hypochlorite.

a.

b.

2. Matching: Please math the chemical with the available chlorine by weight by drawing lines between the matches:

<u>Chemical</u>	<u>Available</u>
	Chlorine by
	<u>Weight</u>
Sodium hypochlorite	0.1 %
Household bleach	5.25%
Calcium hypochlorite	12 to 15%
	65 to 70%

- 3. Which of the following affect the stability of hypochlorite:
  - Temperature
  - Color
  - Exposure to light
  - How long it is stored
- 4. Circle the choice that best fills in the blank:
  - The <u>higher / lower</u> the concentration of sodium hypochlorite, the more stable it is.
  - Chlorine is less effective as the temperature <u>decreases / increases</u>.
  - Chlorine is less effective as the pH <u>decreases/ increases.</u>

5.	Dry calcium hypochlorite will lose to	_ percent available chlorine per
	year.	
6.	All hypochlorite solutions will release oxygen gas	as the solution decomposes.
	a. True	b. False

## Unit 2 – Chemical Handling, Storage and Safety

#### **Learning Objectives**

- · Explain proper handling and storage of hypochlorite
- Use the hypochlorite SDS sheet (formerly MSDS)
- Identify hypochlorite health and environmental hazards
- Identify personal protection equipment and first aid

#### Quantities

- Provide storage in separate rooms to avoid contact with organic material.
- Storage for a 30-day supply should be available.
- Sodium hypochlorite should not be stored longer than 45 days since its strength decomposes in storage.
- Store in a cool, dry atmosphere.

#### **Types of Storage Containers**

#### Sodium Hypochlorite

- Storage is available in 5, 15, 30 and 55 gallon drums.
- Bulk liquid should be stored in on-site bulk liquid storage tanks.

#### Calcium Hypochlorite

- Storage is available in 5, 15, 100, and 300 pound cans, and 415 and 800 pound barrels.
- It should be stored in shipping containers until it is used.
- After a container is opened, loss of chlorine will occur, particularly if exposed to moisture in the air.

#### **Storage Rooms**

Hypochlorite will spontaneously react with organic materials. As a result, it should be stored separate from all organic materials such as:

- Turpentine.
- Oils.
- Sugar.
- Fats.
- Paper products.
- Other oxidizable materials.

#### Temperature

Maintain temperature of storage rooms between 60 and 70° F.

#### Ventilation

- Forced air ventilation should be provided.
- Operate fans when the room is occupied.

#### Light

Prevent exposure to sunlight.

#### **Materials of Construction**

Hypochlorites are caustic; therefore, rubber, glass, PVC and other similar materials should be used when contact with hypochlorite solutions is necessary.

#### Containment

- Provide spill containment for bulk liquid storage facilities.
- Provide containment volume of 110% of the largest liquid vessel to be stored.

#### Safety Data Sheets

A Safety Data Sheet, or SDS, is available from the chemical manufacturer/supplier for every chemical. For years, these sheets were commonly known as MSDS for Material Safety Data Sheet. However, the Occupational Safety and Health Administration (OSHA) Hazard Communication Standard of 2012 (HazCom 2012) mandates the use of a single format for safety data sheets featuring 16 sections. MSDS sheets can used by manufacturers until June 1, 2015, but many manufacturers are complying before this date.

You should read and understand the SDS for each chemical used in the plant. You should also maintain a personal copy for all hazardous chemicals that are used.

An SDS contains detailed assessments of chemical characteristics, hazards and other information relative to health, safety and the environment. The SDS includes:

- Section 1, Identification
- Section 2, Hazard(s) identification
- Section 3, Composition/information on ingredients
- Section 4, First-aid measures
- Section 5, Fire-fighting measures
- Section 6, Accidental release measures
- Section 7, Handling and storage
- Section 8, Exposure controls/personal protection
- Section 9, Physical and chemical properties
- Section 10, Stability and reactivity
- Section 11, Toxicological information
- Section 12, Ecological information
- Section 13, Disposal considerations
- Section 14, Transport information
- Section 15, Regulatory information
- Section 16, Other information, includes the date of preparation or last revision.

A sample MSDS is located in the Appendix.

#### **Hypochlorite Hazards**

- Hypochlorite does not present the same hazards as gaseous chlorine, so it is safer to handle.
- All forms of chlorine can give off chlorine gas and fumes which could irritate one's respiratory system.
  - ▶ Chlorine gas is released when hypochlorite is exposed to high heat.
  - ▶ Chlorine fumes have a distinct chlorine smell, which can result in respiratory problems similar to those experienced with chlorine gas.
- Hypochlorite should be handled with clean, dry implements that are free of organic materials.

#### Spills

Hypochlorite spills should be washed with large volumes of water to dilute it.

#### Health

- Hypochlorite can irritate both skin and eyes. It will cause discomfort and/or a rash.
- Immediately wash affected areas thoroughly with water, and flush eyes if hypochlorite has come into contact with them.

#### **Environmental**

The effects of hypochlorite on animals are similar to the health effects it has on humans. It is toxic to aquatic life.

#### **Personnel Safety Protection**

#### **Basic Equipment**

- Safety protection equipment for hypochlorite is similar to equipment used for other corrosive chemicals.
- Equipment must be used and maintained in strict accordance with manufacturers' recommendations and instructions.
- Protective clothing includes:
  - ▶ Eye protection.
  - Gloves.
  - Rubber aprons.
- Emergency showers and eye-wash stations should be provided.



Figure 25.4 An Emergency Shower



Figure 25.5 An Eye Wash Station

#### First Aid

#### Inhalation

- Remove the injured party and take person(s) to an uncontaminated outdoor area.
- Call for medical assistance.

#### **Skin Contact**

- Immediately shower with large quantities of water.
- Remove protective clothing and equipment while in the shower.
- Flush the skin with water for at least 5 minutes.
- Call for medical assistance.
- Keep the affected area cool.

#### **Eye Contact**

- Immediately shower with large quantities of water while holding eyes open.
- Call a physician immediately.
- Transfer person(s) promptly to a medical facility.

#### Ingestion

- Do not induce vomiting.
- Give large quantities of water.
- Call a physician immediately.
- Transfer person(s) promptly to a medical facility.



#### Key points for Unit 2 - Chemical Handling, Storage and Safety.

- Temperature, ventilation, and light are important considerations when storing hypochlorite.
- Storage rooms should be kept separate and avoid contact with organic material.
- Storage for a 30 day supply is usually recommended.
- ♣ Don't store for more than 45 days since hypochlorite decomposes and loses potency.
- Hypochlorites are caustic. Use rubber, glass, PVC and other similar materials when storing hypochlorite.
- Provide spill containment for bulk liquid storage.
- Material Safety Data Sheets, or MSDS, should be readily available at the work site and reviewed by each worker.
- Hypochlorite should be handled with clean, dry implements that are free of organic materials.
- Since hypochlorites are corrosive to the skin, eyes, mouth and respiratory system, workers should be using appropriate protective clothing which includes eye protection, gloves, and rubber aprons. An emergency shower and an eye wash station should also be available.
- Each worker should thoroughly review and/or receive training in first aid procedures for hypochlorite accidents.



## Exercise for Unit 2 – Storage, Handling and Safety

1.	Sodium hypochlorite should not be stored longer than days since its strength
	decomposes in storage.
2.	Calcium hypochlorite should be stored in its containers until it is used.
3.	Hypochlorites decompose and release into the air.
4.	Forced air ventilation should be turned on whenever workers enter the hypochlorite storage or work
	area.
	a. True b. False
5.	MSDS is an abbreviation for
	a. Note: These are being changed to simply "SDS."
6.	Typical information in a Safety Data Sheet includes:
	a. The product name and its synonyms.
	b. Fire and explosion hazard data.
	c. Toxicity data.
	d. First aid procedures.
	e. All of the above.
7.	Hypochlorite spills should be washed with large amounts of to dilute it.
8.	Hypochlorite will react spontaneously with organic material and should be kept separate from all
	organic compounds such as: fats, sugar, oils, turpentine, paper, and other oxidizable materials.
	a. True
	b. False
9.	First aid procedures for skin contact with hypochlorite include showering with large quantities of
	and calling for medical assistance.
10	. Hypochlorite should be stored so that it does not get direct exposure to

#### References

1 Further information about OSHA requirements can be obtained from:

www.osha.gov

or by phoning the OSHA regional office in Philadelphia 215-861-4900

2 Safety Practices for Water Utilities, AWWA Manual of Water Supply Practices, M3, Sixth Edition, 2002.

## Unit 3 – Math Principles and Process Control Calculations

#### **Learning Objectives**

- Describe math terms, principles and rules for solving equations.
- Review unit cancellation steps.
- Perform calculations for the following types of situations:
  - Calculating changing % concentrations of a chemical
  - Dosage/Feed Rate/Flow
  - Chlorine Demand or Dose
  - **♣** CT

#### Basic Math Principles for Solving Dosage Calculations

Here are some basic math terms and principles.

**Fraction:** A numerical expression containing a numerator and denominator that represents portions of a whole object. Fractions are used to represent ratios and represent division. For example, the fraction  $\frac{1}{2}$  is used to represent the ratio 1:4 and 1  $\div$  4.

#### Parts of a Fraction

- 1. **Numerator:** The **top** number of a fraction that indicates how many parts are being considered.
- 2. **Division Line:** The line between the numerator and denominator that indicates that the numerator value is divided by the denominator value to convert a fraction into a decimal.

Example:  $1 \div 4 = 0.25$  (as a decimal)

3. **Denominator:** The **bottom** number of a fraction that tells us how many equal parts into which the whole has been divided.

#### **Fraction Written in Vertical Format:**

- 1 (numerator)
- 4 (denominator)

#### **Class Activity**


Write the follow	ing fractions in vertical format:
1/8 =	_ (The numerator is:)
2/6 =	(The denominator is:)
8 10 means that	is divided by

#### Rules for Solving for an Unknown Variable (such as X)

When solving for the unknown variable (X), there are 2 basic objectives:

- 1. **X** must be in the numerator, **AND**
- 2. X must be by itself (on one side of the equation).

To accomplish these objectives, only diagonal movement of terms across the equal sign is permissible in multiplication and division problems.



#### Explanation of diagonal movement and an example.

An equation is a mathematical statement in which the terms or calculation on one side = the terms or calculation on the other side. To keep both sides equal, any multiplication or division done to one side, must be done to the other. This keeps the equation balanced.

#### Example 1:

$$5X = 20$$

Question #1 regarding Example #1: Is the *X* in the numerator? \_\_\_\_\_

Question #2 regarding Example #1: Is the *X* alone on one side of the equation? \_\_\_\_\_

How do we use diagonal movement to place **X** alone on one side of the equation?

#### Answer:

• Divide both sides by "5" to get *X* alone and **treat both sides of the equation equally**. Notice that the 5 was moved from the top of the left side to the bottom of the right side of the equation – a **diagonal move**.

$$\frac{5X}{5} = \frac{20}{5}$$

FINAL ANSWER: \_\_\_\_\_

#### Example 2:

$$2.5 = \frac{1,000}{X}$$

Question #1 regarding Example #2: Is the X in the numerator?

How do we move the **X** into the numerator?

Answer:

• Multiply both sides of the equation by *X*. Or, you could think of it as simply moving the *X* diagonally from the denominator into the numerator.

$$X(2.5) = \frac{1,000(X)}{X}$$

OR

$$X(2.5) = \frac{1,000}{X}$$

Question #2 regarding Example #2: Is the X alone on one side of the equation?

How do we use diagonal movement to place  $\boldsymbol{X}$  alone on one side of the equation?

Answer:

• Divide by 2.5 on each side of the equation so that the *X* is alone, but the equation keeps the same value.

$$\frac{X(2.5)}{2.5} = \frac{1,000}{2.5}$$

$$X = \frac{1,000}{2.5}$$

FINAL ANSWER: \_\_\_\_\_

Class Exercise Solving for X:

$$\frac{X}{200} = 2.4$$

There are a few rules for doing the various mathematical functions like multiplication, division, addition and subtraction.

#### Order of Operation for Multiplication, Division, Addition and Subtraction

To solve for X when multiplication and division as well as addition and subtraction of terms is indicated, use the following steps:

- 1. Simplify as many terms as possible, using the order of operation:
  - If brackets or parentheses contain any arithmetic, simplify within these groups first by:
    - Completing the multiplication or division, THEN
    - o Complete the addition or subtraction.
  - Complete all multiplication and division from left to right, THEN
  - Complete all addition and subtraction from left to right.
- 2. Verify that the *X* term is in the numerator. If it is not, move the *X* term to the numerator, using a diagonal move.
- 3. Verify that **X** is by itself, on one side of the equation.

#### Explanation of the Order of Operation and an example.

#### Example 1:

**Step #1:** Simplify terms within parentheses by multiplying and dividing from left to right.

$$= 4 (5 + 3) + 6$$

Step # 2: THEN simplify terms within parentheses by adding and subtracting from left to right.

$$= 4 (8) + 6$$

Step #3: Simplify terms outside of parentheses by multiplying and dividing from left to right.

$$= 32 + 6$$

Step #4: Simplify terms outside of parentheses by adding and subtracting from left to right.

Class Exercise: Explanation of the Order of Operation
Example 2:
(X)(2)(8.34) = 500
Step #1: Simplify terms by multiplying and dividing from left to right.
<b>Step # 2:</b> Verify that the X term is in the numerator. If it is not, move the <i>X</i> term to the numerator, using a diagonal move.
Is X in the numerator
<b>Step #3:</b> Verify that $X$ is by itself, on one side of the equation. If it is not, divide both sides of the equation by the number on the $X$ side of the equation.
Does this equation require a division? If so by what number?
FINAL ANSWER: 500 ÷ 16.68 =

Now let's discuss the concept of unit cancellation.

#### **Problem Solving Using Unit Cancellation:**

We give it that name because you cancel units until the problem is solved.

- Unit cancellation involves canceling units in the numerator and denominator of unit fractions to obtain the desired units of measurement.
- Unit cancellation can be used to make conversions or to solve problems.

There are three basic rules for using unit cancellation on the next page.

#### Basic rules for using unit cancellation:

Unit fractions should be written in a vertical format. A unit fraction has one unit in the numerator (above the line) and one unit in the denominator (below the line).

1. A fraction is structured like this: <u>numerator</u>

denominator

For example, gallons per minute (GPM) should be written as  $\underline{\text{gal}}$ 

2. Any unit which appears in the numerator of one unit fraction and the denominator of another unit fraction is canceled.

The following is an example of how units are canceled:

3. It may be necessary to invert data and the corresponding units.

$$\begin{array}{ccc} 10 & \underline{\text{gal}} & \text{is the same as} & \underline{1 \, \text{min}} \\ & & \text{min} & & 10 \, \text{gal} \end{array}$$

**Example Problem:** How many mL/min are in a flow of 5 gal/day?

#### Problem Set Up

List all known and unknown data.

Unknown: ? <u>mL</u> Known: 5 <u>gal</u> day

From this data, find units which need to be converted.

Volume units: gal to mL Time units: day to min

Find conversions from the conversion charts.

1 gal = 3,785 mL 1 day = 1,440 min

This is all the data we need to use in the problem.

#### Steps to solving problems using unit cancellation

**Step 1**: List unknown data including units in vertical format followed by an equal sign.

Example: Unknown data:  $? \underline{\mathsf{mL}} = \min$ 

NOTE: You may need to invert data throughout the following steps.

**Step 2**: Find data (known or a conversion) that has the same numerator unit as the unknown numerator. Place it to the right of the equal sign. Add a multiplication sign. This positions your numerator.

Example: 
$$? \underline{\mathsf{mL}} = 3,785 \underbrace{\mathsf{mL}}_{\mathsf{min}} \times 1 \ \mathsf{gal}$$
 *Conversion*

**Step 3**: To cancel unwanted denominator unit, find data (known or a conversion) that has the same numerator unit. Place it to the right of data used in Step 2. Place a multiplication sign between each piece of data.

Example: 
$$\frac{mL}{min} = 3,785 \underbrace{m}_{x} \times \underbrace{5 \text{ gal}}_{1 \text{ day}} \times \underbrace{\text{Known}}_{x}$$

**Step 4**: Continue to place data (known or a conversion) into equation to systematically cancel all unwanted units until only the unknown denominator units remain.

Example: ? 
$$\underline{\text{mL}} = 3,785 \underline{\text{mL}} \times 5 \underline{\text{gal}} \times 1 \underline{\text{day}} \longleftarrow Conversion$$
  
min  $\underline{\text{gal}} = 1,440 \underline{\text{min}}$ 

**Note 1:** All units must cancel, leaving only the units you are solving for in the unknown data. If all units except the unknown units are not crossed out, check the list of known data to see if all relevant known data was used to solve the problem and all necessary conversions were made.

**Note 2**: If you need to invert the known data or conversion values and units to cancel, remember to move the appropriate units with the value.

**Step 5**: Multiply the values of all numerators and place this value in the numerator of the answer. Multiply the values of all denominators and place this value in the denominator of the answer. Divide to calculate the final answer.

Important: Check the answer to verify that the value is reasonable.

Example: ? 
$$\underline{\text{mL}} = \underline{18,925 \text{ mL}} = 13.1 \underline{\text{mL}}$$
  
min 1440 min min

#### **Practice Problem:**

How many hours will it take to empty a 55 gallon drum of sodium hypochlorite using a chemical feed pump that's pumping at a rate of 30 mL/min?

Solution:


Unknown Data: \_\_\_\_\_

Known Data:

**Unit Cancellation Steps:** 

If a water treatment plant produces 3 million gallons per day, and uses chlorine gas, dosed at 7 mg/l, you can calculate how many pounds per day the plant will use.

#### **Unit Cancellation Steps:**

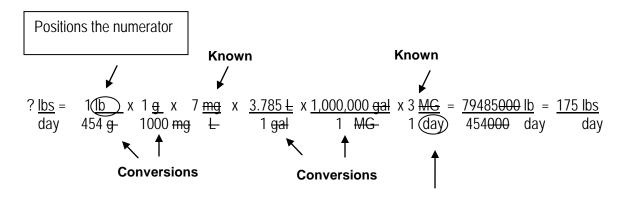

Cancel unwanted units until you get to the denominator unit that you are solving the equation for (in this example it's "day")

# **Unit Cancellation Steps**

- Step 1: List? unknown data including units followed by an = sign
- Step 2: Place data with same numerator unit to the right of the equal sign followed by a multiplication sign. This positions your numerator.
- Step 3: To cancel unwanted denominator unit, next place data with same numerator unit.
- Step 4: Continue to place data into equation to systemically cancel all unwanted units until only the unknown denominator units remain.
- Step 5: Do the math (Multiply all numerator values, multiply all denominator values, then divide numerator by the denominator.)

### **Example:**

The density of a liquid is 1 gm/mL in the Metric system. What is the density in the English system (lbs/gal)?

Notice that this conversion proves that the density of water = 8.34 lbs/gallon.

$$\frac{1 \text{ lbs}}{1 \text{ gal}} = \frac{1 \text{ lb}}{1 \text{ gal}} \times \frac{1 \text{ gm}}{1 \text{ gal}} \times \frac{3785 \text{ mL}}{1 \text{ gal}} = 8.34 \text{ lbs}$$

# **Helpful Hints:**

**Numerator** 

Denominator

Vertical format: 5 gal = 5 gal

1 gm = 1000 mg is written: <u>1 gm</u> OR <u>1000 mg</u> 1000 mg 1 gm

"per" means divided by: Ex. 5 gpm = 5 gal 1min

Inverting:  $5 \underline{\text{gal}} = 1 \underline{\text{min}}$ 1 min 5 gal

# Calculations for Changing % Concentrations of a Chemical

We purchase sodium hypo in 12%-15% strength, but we may have to dilute it (maybe our pump is just sized too big). Then we have to figure out how many gallons we are going to pump.

**Problem:** In 12 hours, you feed 1.2 gallons of 12% hypochlorite solution. How many gallons would you have to use if the concentration is 5%?

**Step 1:** Set up math equation: Remember, in an equation, the terms or calculations on one side equal the terms or calculations on the other side. We can use this fact to put our problem in equation form.

$$1.2 \text{ gal x } 12\% = ? \text{ gal x } 5\%$$

**Step 2**: Divide both sides by 5% to get **? gal** alone on the right side of the equation (basic math rule)

$$\frac{1.2 \text{ gal}}{5 \%}$$
 x 12% = ? gal x  $\frac{5\%}{5\%}$ 

**Step 3**: Multiply 1.2 x 12 = 14.4 in the numerator (basic math rule)

**Step 4**: Perform the division: 14.4 (numerator) ÷ 5 (denominator) = 2.88 gallons (final basic math rule)

Note – the 12 hours was not important!

**Practice Problem:** You purchase a new pump. The old pump fed 5.5 gallons daily of 15% sodium hypochlorite. You need to change your concentration to a 6% solution. How many gallons can you now expect to use each day?

- **Step 1**: Set up math equation: \_\_\_\_\_ gal x \_\_\_\_% = ? gal x \_\_\_\_%
- Step 2: Divide both sides by 6% to get ? gal alone on the right side of the equation
- <u>gal</u> x <u></u>% = ? gal x <u>6%</u> 6 %
- Step 3: Multiply \_\_\_\_\_ x \_\_\_ = \_\_\_ in the numerator
- Step 4: Perform the division: \_\_\_\_\_ (numerator) ÷ \_\_\_\_\_ (denominator) = \_\_\_\_\_ gallons

#### **Process Calculations**

There are three basic chlorination process calculations:


- 1. chlorine dosage or feed rate
- 2. chlorine demand
- 3. CT calculation

# **Chlorine Dosage/Feed Rate Calculation**

To perform the calculation, you will need to know the amount of chlorine being added and the amount of water being treated.

Feed Rate, lbs/day = Flow (MGD) x Dosage (mg/L) x 8.34 lbs/gal

This formula is represented in the following diagram called the Davidson Pie which was created by Gerald Davidson, Manager, Clear Lake Oaks Water District, Clear Lake Oaks, CA.

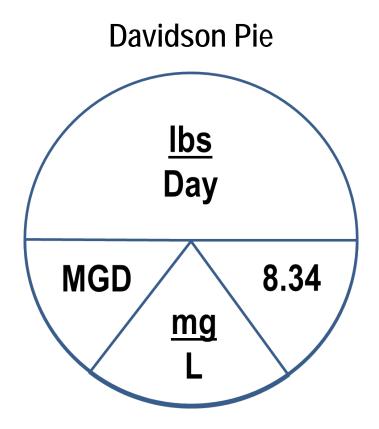

#### **Key Acronyms:**

MG = million gallons MGD = million gallons per day

#### **Davidson Pie Diagram Interpretation and Formulas**

This diagram can be used to solve for 3 different results: dosage, feed rate, and flow (or volume).

As long as you have 2 of those 3 variables, you can solve for the missing variable.

#### **Davidson Pie Interpretation**

Middle line = divided by (÷)
Bottom diagonal lines = multiply by (x)

In other words, here are the 3 equations that can be used with these variables:

- 1. Feed Rate, Ibs/day = Flow (MGD) or Volume (MG) x Dosage (mg/L) x 8.34 (which is the density of water)
- 2. Flow (MGD) =  $lbs/day \div (Dosage, mg/L \times 8.34)$

Vertical Format: Flow(MGD) = Feed Rate (lbs/day)
[Dosage (mg/L) x 8.34]

3. Dosage (mg/L) = lbs/day  $\div$  (Flow, MGD x 8.34)

Vertical Format: Dosage (mg/L) =  $\frac{\text{Feed Rate (lbs/day)}}{[\text{Flow(MGD) x 8.34}]}$ 

# **Equation # 1: Feed Rate Calculation Using Flow**

## Solving for Pounds/Day

Feed Rate, Pounds per day = flow(MGD) x dose(mg/L) x (8.34)

This equation alone (without extra steps) can be used to solve for feed rates of 100% strength chemicals, such as chlorine gas.

A water treatment plant produces 3 million gallons per day, and uses chlorine gas, dosed at 7 mg/L, how many pounds per day will the plant will use?

Feed Rate, Pounds per day = 3 x 7 x 8.34 = 175 pounds per day (same answer as the unit cancellation answer from earlier)

When we are using chemicals that aren't 100% strength, we need to factor in the active strength of the chemical into the calculation.



Active Strength is the percentage of a chemical or substance in a mixture that can be used in a chemical reaction. (also referred to as % purity)

# Feed Rate Calculations Using Flow with a % Strength (i.e., % pure) Solution

Unlike chlorine gas, sodium and calcium hypochlorite solutions are not 100 percent pure. For example, the sodium hypochlorite typically used is 12.5% pure. That means that out of every gallon of hypochlorite, only 12.5% is the chlorine component, and the other material (87.5%) is not chlorine.

**Problem:** A water plant uses sodium hypochlorite (12.5%) to disinfect the water. The target dose is 1.2 mg/L. They treat 0.25 million gallons per day. How many pounds of sodium hypochlorite will need to be fed?

**Step 1**: Solve for pounds per day (feed rate) for 100% pure chemical (no impurities).

Using the formula pounds per day = flow x dose x 8.34 = (0.25)(1.2)(8.34) = 2.5 pounds of chlorine is required.

Step 2: Calculate # of pounds of 12.5% solution needed to achieve Step 1 feed rate.

Since they are using hypochlorite, and only 12.5% of the hypo is chlorine, we need to calculate how many pounds of hypo are required to get 2.5 pounds of chlorine. To do that we need to change the percent to a decimal, and divide that into the pounds required.

a) Convert % purity of solution into a decimal:

$$\frac{12.5 \%}{100\%} = 0.125$$

b) Then divide the pounds needed (feed rate of 100% pure chemical) by the % purity of the solution (as a decimal).

2.5 pounds = 20 pounds of 12.5% hypochlorite. 0.125 (% purity as a decimal)

TIP: Answer will always be more pounds than Step 1 result because solution is not 100% pure.

**Practice Problem:** A water plant uses sodium hypochlorite (15%) to disinfect the water. The target dose is 1.6 mg/L. They treat 0.25 million gallons per day. How many pounds of sodium hypochlorite will need to be fed?

Step 1: Solve for pounds per day (feed rate) for 100% pure chemical (no impurities).

Using the formula pounds per day = flow x dose x  $8.34 = (____)(___)(___) = ____ pounds$  of chlorine is required.

**Step 2**: Calculate # of pounds of 15% solution needed to achieve Step 1 feed rate.

a) Convert % purity of solution into a decimal:

$$\frac{15 \%}{100\%} =$$
\_\_\_\_\_

b) Then divide the pounds needed (feed rate of 100% pure chemical) by the % purity of the solution (as a decimal).

 $\frac{\text{pounds}}{0.15} = \frac{\text{of } 15\% \text{ hypochlorite.}}{0.15 \text{ (% purity as a decimal)}}$ 

TIP: Answer will always be more pounds than Step 1 result because solution is not 100% pure.

When you have a flow in gallons per minute (GPM) or gallons per day (GPD), you will need to convert those values into million gallons per day (MGD) before using the feed rate formula.

# Converting from GPM to MGD before solving with the formula

**Problem:** A water treatment plant operates at the rate of 75 gallons per minute. They dose soda ash at 14 mg/L. How many pounds of soda ash will they use in a day?

We'll use unit cancellation to show the steps involved in doing this math.

Step 1: Convert gallons per minute into gallons per day using unit cancellation.

Step 2: Convert gallons per day into million gallons per day (MGD) using unit cancellation.

$$?MG = 1 MG$$
 x  $108,000 \text{ gallons}$  = 0.108 MGD day 1,000,000 gallons  $(ay)$ 

Step 3: Use MGD in feed rate formula to solve for lbs/day

Feed Rate, Pounds per day = flow(MGD) x dose(mg/L) x (8.34)

 $0.108 \times 14 \times 8.34 = 12.61 \text{ lbs/day}$ 

Steps 1 and 2 can be combined like this:

Step 1: Convert gallons per minute into million gallons per day (MGD) using unit cancellation.

$$? \underline{MG} = 1 \underline{MG}$$
 x  $75 \underline{gal}$  x  $\underline{60 \text{ minutes}}$  x  $\underline{24 \text{ hours}} = 0.108 \underline{MG}$  day  $1,000,000 \underline{gallons}$  minute hour day

You can also use the conversion of 1 day = 1440 mins (60 X 24) to remove 2 conversions (minutes/hour and hours/day)

Step 1: Convert gallons per minute into million gallons per day (MGD) using unit cancellation.

$$? \underline{MG} = 1 \underline{MG}$$
 x 75 gal x 1440 minutes = 0.108 MG day 1,000,000 gallons minute (day) day

# Converting from GPD to MGD before solving with the formula

**Problem:** If a water treatment plant is making water at the rate of 150,000 gallons per day, and the chlorine dose is 0.8 mg/L, how many pounds of chlorine will they use daily (assume 100% strength)?

Step 1: Convert gallons per day into million gallons per day (MGD) using unit cancellation.

Step 2: Use MGD in feed rate formula to solve for lbs/day

Feed Rate, Pounds per day = flow(MGD) x dose(mg/L) x (8.34)

 $0.15 \times 0.8 \times 8.34 = 1 \text{ lb/day}$ 

Notice that you can also use this first equation and substitute **volume** for flow. In addition, the feed rate is determined in **pounds**, rather than pounds per day.

# Feed Rate Problem Using Volume instead of Flow with a % Strength Chemical

Your storage tank has been taken out of service for cleaning. The 50,000 gallon tank must be properly disinfected before you can return it to service. The consulting firm recommends you use 25 mg/L of 68% calcium hypochlorite. How many pounds of calcium hypochlorite do you need to add to the water?

Step 1: Convert volume (in gallons) into MG so that the feed rate formula can be used.

$$?MG = 1 MG X 50,000 gal = 0.05 MG 1,000,000 gal$$

Step 2: Solve for pounds (feed rate) for 100% pure chemical (no impurities).

? lbs = volume(MG) x dose(mg/L) x 8.34 = (0.05)(25)(8.34) = 10.4 pounds of chlorine is required.

Step 3: Calculate # of pounds of 68% solution needed to achieve Step 2 feed rate.

Since they are using hypochlorite, and only 68% of the hypo is chlorine, we need to calculate how many pounds of hypo are required to get 10.4 pounds of chlorine. To do that we need to change the percent to a decimal, and divide the pounds required by the purity of the solution (as a decimal).

a) Convert % purity of solution into a decimal:

$$\frac{68\%}{100\%} = 0.68$$

b) Then divide the pounds needed (feed rate of 100% pure chemical) by the % purity of the solution (as a decimal).

10.4 pounds = 15.3 pounds of hypochlorite. 0.68 (% purity as a decimal)

#### Practice Problem #1

Calculate the amount of calcium hypochlorite required to dose a 500,000 gallon storage tank to a dose of 25 mg/L using granular calcium hypochlorite that indicates it is 65% chlorine.

**Step 1**: Convert volume (in gallons) into MG so that the feed rate formula can be used.

 $?MG = 1 MG X (_____) gal = ___ MG$ 

Step 2: Solve for pounds (feed rate) for 100% pure chemical (no impurities).

? lbs = volume(MG) x dose(mg/L) x 8.34 =  $(\underline{\phantom{M}})(\underline{\phantom{M}})(\underline{\phantom{M}})$  =  $\underline{\phantom{M}}$  pounds of chlorine is required.

Step 3: Calculate # of pounds of 65% solution needed to achieve Step 2 feed rate.

a) Convert % purity of solution into a decimal:

<u>65%</u> = \_\_\_\_\_

b) Then divide the pounds needed (feed rate of 100% pure chemical) by the % purity of the solution (as a decimal).

<u>pounds</u> = \_\_\_\_ pounds of 65% calcium hypochlorite.

#### Practice Problem #2:

Calculate the amount of chlorine required for a dosage of 1 mg/L in a 600,000 gallon storage tank. The tank is ¾ full. (Assume 100% strength)

**Step 1**: Calculate volume of tank that is not 100% full by multiplying the volume by the fraction (or its equivalent decimal.)

$$600,000 \times 3 =$$
 gallons OR  $600,000 \times 0.75 =$  gallons

**Step 2**: Convert volume (in gallons) into MG so that the feed rate (lbs) formula can be used.

$$?MG = 1 MG X 450,000 gal = ___ MG 1,000,000 gal = ___ MG$$

Step 3: Solve for pounds (feed rate) for 100 % pure chemical (no impurities).

? lbs = volume(MG) x dose(mg/L) x 8.34 = (.45)(1)(8.34) = \_\_\_\_\_ pounds of chlorine is required.

The following page provides summary of the feed rate calculation steps we use when we have either a volume or a flow. This will always be used when solving for POUNDS or POUNDS/DAY. So, whenever you see a problem that asks to solve for an amount in pounds, use these steps!

# Summary of Steps for Solving Feed Formula Calculations in <u>Pounds/Day</u> for % Strength (i.e., % Purity) Solutions (using either volume or flow rate)

**Example**: Calculate the amount of calcium hypochlorite required to dose a 500,000 gallon storage tank to a dose of 25 mg/L using granular calcium hypochlorite that indicates it is 65% chlorine.

**Step 1**: Convert volume (in gallons) into MG <u>or</u> flow in gallons (per day or per minute) into MGD so that the feed rate (lbs or lbs/day) formula can be used.

?MG = 
$$\frac{1 \text{ MG}}{1,000,000 \text{ gal}}$$
 X volume of tank (gal) OR

$$?MGD = 1 MG X volume of flow (gal) OR$$
  
1,000,000 gal 1 day

$$?MGD = 1 MG$$
  $x volume of flow (gal)$   $x 1440 min day$ 

**Step 2**: Solve for pounds (feed rate) for 100% pure chemical (no impurities). (104.25 pounds for this example)

? lbs = volume(MG) x dose(mg/L) x 8.34 = pounds of chlorine that are required.

Step 3: Calculate # of pounds of % solution needed (in this example, 65%) to achieve Step 2 feed rate.

a) Convert % purity of solution into a decimal:

$$\frac{65\%}{100\%} = 0.65$$

b) Then divide the pounds needed (feed rate of 100% pure chemical) by the % purity of the solution (as a decimal).

<u>104.25 pounds</u> = 160.39 pounds of 65% calcium hypochlorite. 0.65

TIP: Answer will always be more pounds than Step 2 result because solution is not 100% pure.

How do we convert pounds of a solution into gallons of that same solution?

## Solving for Gallons/Day

# Calculating "Active Ingredient" Weight

In addition to knowing that solutions are not 100% pure (i.e. 100% active), we also need to determine the weight of the active strength ingredients within that solution.

Active ingredient weight is the number of pounds of "active ingredient" per gallon of a % solution that cause a chemical reaction.

• This "active ingredient" weight value is then used in a calculation with the 100% pure "lbs/day" feed rate to determine the "gal/day" feed rate.

We need the specific gravity of the solution which is found on the MSDS sheet to calculate the weight of the active ingredients within that solution.

# Calculating the Weight of the "Active Ingredient" of a % Solution Chemical

**EXAMPLE**: How many pounds of chlorine are there in a gallon of sodium hypochlorite that is 12.5% pure that has a specific gravity of 1.15?

Step 1: Solve weight equation (lbs/gal) for 1 gallon of chemical

Weight, lbs/gal = (Specific gravity of substance) x (weight of a gallon of water)

Step 2: Determine the "active ingredient" weight of the chlorine based on the % purity of solution

a) Convert % purity of solution into a decimal:

$$\frac{12.5\%}{100\%} = 0.125$$

- b) Multiply the weight of a gallon (from step 1) by the % purity of the product (as a decimal).
  - $9.59 \, \underline{\text{pounds}} \, \times \, 0.125 = 1.2 \, \text{pounds}$  of available chlorine in a gallon of 12.5% sodium hypochlorite gallon

This "active ingredient" weight provides the pounds of available chlorine that is found in each gallon of 12.5% sodium hypochlorite solution. Within the 9.59 pounds of 12.5% sodium hypochlorite, there are 1.2 pounds of available chlorine (i.e., active ingredient).

Now that we know the active ingredient weight of the solution, we can use this information to determine how many gallons we need to feed. We'll use unit cancellation to determine the number of gallons/day from the lbs/day feed rate.

# Using "Active Ingredient" Weight to Convert Feed Rate from lbs/day to gals/day

**Example:** A water plant uses sodium hypochlorite (12%) to disinfect the water which provides 1.2 lbs/gal of available chlorine ("active ingredient" weight). The required dosage is 2.5 mg/L. They treat 118,000 gallons per day. How many **gallons** of sodium hypochlorite will need to be fed?


**Step 1**: Convert flow in gallons (per day) into MGD so that the feed rate (lbs/day) formula can be used.

$$? MGD = 1 MG X 118,000 (gal) = 0.118 MGD 1,000,000 gal 1 day$$

**Step 2**: Solve for pounds per day (feed rate) for 100% pure chemical (no impurities).

Using the formula pounds per day = flow x dose x 8.34 = (0.118)(2.5)(8.34) = 2.46 pounds of chlorine is required.

Step 3: Use "active ingredient" weight with unit cancellation steps to convert lbs/day to gals/day

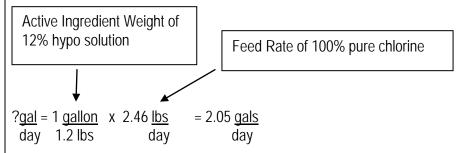

NOTE: When you are given the "active ingredient" weight of a solution to solve a feed rate problem, you do not need to use the % purity factor because it was used in the weight calculation.

**Practice Problem:** A water plant uses sodium hypochlorite (12.5%) to disinfect the water which provides 1.2 lbs/gal of available chlorine ("active ingredient" weight). The chlorine dosage is 1.6 mg/L. They treat 600,000 gallons per day. How many gallons of sodium hypochlorite will need to be fed?


Step 1: Convert flow in gallons (per day) into MGD so that the feed rate (lbs/day) formula can be used.

$$? MGD = 1 MG X 600,000 gal = MGD 1,000,000 gal 1 day$$

**Step 2**: Solve for pounds per day (feed rate) for 100% pure chemical (no impurities).

Using the formula pounds per day = flow x dose x  $8.34 = (\underline{\phantom{0}})(\underline{\phantom{0}})(8.34) = \underline{\phantom{0}}$  pounds of chlorine is required.

Step 3: Use "active ingredient" weight with unit cancellation steps to convert lbs/day to gals/day

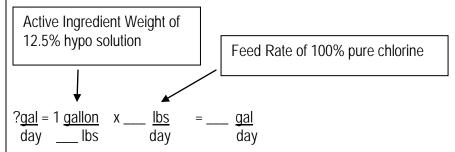

NOTE: When you are given the "active ingredient" weight of a solution to solve a feed rate problem, you do not need to use the % purity factor because it was used in the weight calculation.


# Tip: Two Different Paths for Solving

If the problem asks for pounds or pounds per day, solve the equation using the feed rate formula and dividing by the percent solution. We'll call this Path 1 (steps are summarized on page 3-23)

If the problem **asks for gallons or gallons per day**, solve the equation using the feed rate equation and available chlorine (or active ingredient weight). We'll call this **Path 2** (steps summarized are shown on page 3-25

# Equation #2: Solving for Flow Using the Feed Rate Formula

We will continue to use the Davidson Pie Feed Rate/Dosage Formula.

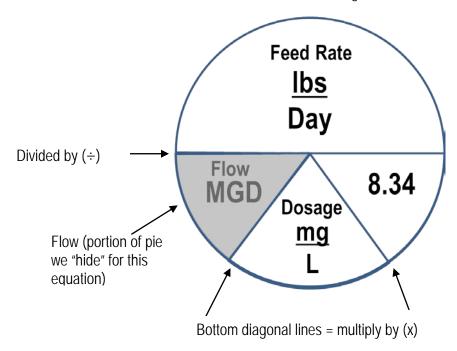

Remember: Middle line represents a division sign (÷)

Bottom diagonal lines = multiply by (x)

Vertical Format: Flow, MGD = Feed Rate, lbs/per day (Dose, mg/L)(8.34)

**Problem:** A water treatment plant uses 14 pounds of chlorine to treat their water daily. The chlorine dose is 1.5 mg/L. What is their flow rate in MGD?

**Step 1**: Set up the variables in vertical format and insert known values

**Step 2**: Multiply 1.5 x 8.34 in the denominator = 12.51 (basic math rule)

Step 3: Perform the FLOW division: 14 (numerator) ÷ 12.51 (denominator) = 1.1 MGD

**Practice Problem:** A water treatment plant uses 8 pounds of chlorine daily and the dose is 17 mg/L. How many gallons are they producing?


**Step 1**: Set up the variables in vertical format and insert known values

? Flow (MGD) = 
$$\frac{\text{Feed Rate, lbs/day}}{\text{(Dose)(8.34)}} = \frac{\text{( ) lbs/day}}{\text{( )(8.34)}}$$

Step 2: Multiply \_\_\_ x 8.34 in the denominator = \_\_\_\_\_ (basic math rule)

Step 3: Perform the FLOW division: 8 (numerator) ÷ 141.78 (denominator) = \_\_\_\_\_ MGD

# **Equation #3: Solving for Dose Using the Feed Rate Formula**

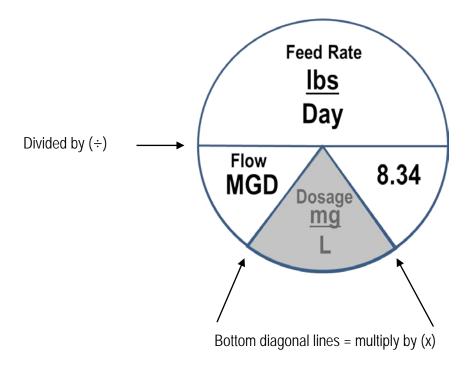

Vertical Format: Dose, mg/L = Feed Rate, lbs/per day (Flow, MGD)(8.34)

Example: A water treatment plant is producing 1.5 million gallons per day of potable water, and uses 38 pounds of chlorine each day. What is the chlorine dose at that plant?

**Step 1**: Set up the variables in vertical format and insert known values

? Dose (mg/L) = 
$$\frac{\text{Feed Rate, lbs/day}}{(\text{Flow, MGD})(8.34)}$$
 =  $\frac{38 \text{ lbs/day}}{(1.5)(8.34)}$  Known feed rate Known Flow (MGD)

**Step 2**: Multiply 1.5 x 8.34 in the denominator = 12.51 (basic math rule)

Step 3: Perform the DOSE division: 38 (numerator) ÷ 12.51 (denominator) = 3.03 mg/L

**Practice Problem:** A water treatment plant produces 150,000 gallons of water every day. It uses an average of 2 pounds of permanganate for iron and manganese removal. What is the dose of the permanganate?

**Step 1**: Set up the variables in vertical format.

? Dose (mg/L) = 
$$\frac{\text{Feed Rate, lbs/day}}{\text{(Flow, MGD)(8.34)}}$$

**Step 2**: Convert gallons per day into MGD and insert known values into equation.

$$?MG = 1 MG x 150,000 gallons = MGD$$
  
day 1,000,000 gallons day

? Dose (mg/L) = 
$$\frac{\text{Feed Rate, lbs/day}}{(\text{Flow, MGD})(8.34)} = \frac{\text{(2) lbs/day}}{(\text{......})(8.34)}$$

#### **Chlorine Demand or Dose Calculation**

A sufficient amount of chlorine must be added so that the chlorine demand is met and the desired chlorine residual is provided.

Chlorine Demand (mg/l) = Chlorine Dose (mg/l) – Chlorine Residual (mg/l)

OR

Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual

**Example #1:** The chlorine demand of water is 2.1 mg/L. If a chlorine residual of 0.6 mg/L is desired, what is the required chlorine dosage in mg/L?

Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual (mg/L)

? Dose = 
$$2.1 + 0.6$$
 =  $2.7 \text{ mg/L}$ 

**Example #2:** The chlorine dosage is 2.9 mg/L. If the chlorine residual is 0.6 mg/L, what is the chlorine demand in mg/L?

Chlorine Demand (mg/L) = Chlorine Dose (mg/L) - Chlorine Residual (mg/L)

? Chlorine Demand = 
$$2.9 - 0.6$$
  
=  $2.3 \text{ mg/L}$ 

# Calculating dose and feed rate for a work shift (less than 24 hours)

**Problem:** You must maintain 0.5 mg/L chlorine residual in the finished water with a chlorine demand of 1.5 mg/L. The pumping rate is 500 gpm. How many pounds of 68% calcium hypochlorite will be fed during the first shift (8 hours)?

#### Step 1: Calculate the dose using the formula

Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual (mg/L)

Dose = 
$$1.5 + 0.5$$
  
=  $2.0 \text{ mg/L}$ 

#### Step 2: Convert gpm to MGD

#### Step 3: Use Feed Rate calculation to solve for lbs/day

? lbs/day = flow x dose x 8.34 = (0.72)(2.0)(8.34) = 12 pounds of chlorine is required.

**Step 4:** Calculate # of pounds of 68% solution needed to achieve Step 3 feed rate.

a) Convert % purity of solution into a decimal:

$$\frac{68\%}{100\%} = 0.68$$

b) Then divide the pounds needed (feed rate of 100% pure chemical) by the % purity of the solution (as a decimal).

<u>12 pounds</u> = 17.6 pounds of 68% calcium hypochlorite. 0.68

Step 5: Calculate pounds needed for an 8 hour shift

<b>Practice Problem:</b> You must maintain 0.5 mg/L chlorine residual in the finished water with a chlorine demand of 1.5 mg/L. The pumping rate is 300 gpm. How many pounds of 65% calcium hypochlorite will be fed during <b>12 hours</b> ?				
Step 1: Calculate the dose using the formula				
Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual (mg/L)				
Dose = mg/L				
Step 2: Convert gpm to MGD				
? <u>MG</u> = x =MGD				
Step 3: Use Feed Rate calculation to solve for lbs/day				
? lbs/day = flow x dose x 8.34 = ()()(8.34) = pounds of chlorine is required.				
Step 4: Calculate # of pounds of 65% solution needed to achieve Step 3 feed rate.				
a) Convert % purity of solution into a decimal:				
<u>65%</u> = 100%				
b) Then divide the pounds needed (feed rate of 100% pure chemical) by the % purity of the solution (as a decimal).				
<u>pounds</u> = pounds of 65% calcium hypochlorite.  0.65				
Step 5: Calculate pounds needed for 12 hours				
?lbs = <u>lbs</u> x 1 <u>day</u> x 12 <u>hrs</u> = lbs in 12 hours day 24 hrs 1				

# Calculating Feed Rate and Converting to gallons per day (again)

**Problem:** How many gallons of 12.5% sodium hypochlorite are required to treat 116,000 gpd with a desired residual of 0.5 mg/L and a chlorine demand of 2.0 mg/L? NOTE: 12.5% sodium hypochlorite = 1.2 lb/gallon available chlorine ("active ingredient" weight).

Remember, the problem asks you to solve for gallons and the available chlorine is given. This is what we called Path 2 in our Tip on Page 3-26.

#### Step 1: Calculate the dose using the formula

Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual (mg/L)

Dose = 
$$2.0 + 0.5$$
  
=  $2.5 \text{ mg/L}$ 


#### Step 2: Convert gpd to MGD

$$\frac{116,000}{1,000,000} = 0.116 \text{ MGD}$$

#### Step 3: Use Feed Rate calculation to solve for lbs/day

? lbs/day = flow x dose x 8.34 = (0.116)(2.5)(8.34) = 2.42 pounds of chlorine is required.

# Step 4: Use "active ingredient" weight with unit cancellation steps to convert lbs/day to gallons/day

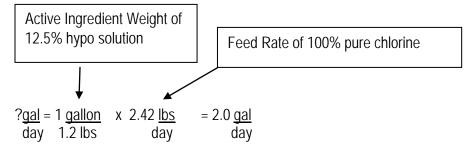

NOTE: When you are given the "active ingredient" weight of a solution to solve a feed rate problem, you do not need to use the % purity factor because it was used in the weight calculation.

**Practice Problem:** How many gallons of 12% sodium hypochlorite are required to treat 150,000 gpd with a desired residual of 0.8 mg/L and a chlorine demand of 0.6 mg/L? NOTE: 12% sodium hypochlorite – 1.2 lb/gallon available chlorine ("active ingredient" weight).

#### Step 1: Calculate the dose using the formula

Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual (mg/L)

Dose = \_\_\_\_mg/L


## Step 2: Convert gpd to MGD

$$\frac{150,000}{1,000,000} =$$
\_\_\_\_\_MGD

#### Step 3: Use Feed Rate calculation to solve for lbs/day

?  $lbs/day = flow x dose x 8.34 = (_____)(___)(8.34) = _____ pounds of chlorine is required.$ 

# Step 4: Use "active ingredient" weight with unit cancellation steps to convert lbs/day to gallons/day

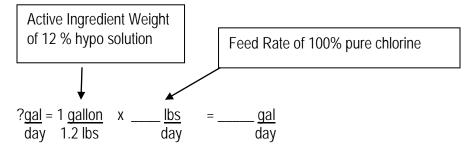

CT

CT – The product of residual disinfectant concentration (C) measured in mg/L in a representative sample of water prior to the first customer, and disinfection contact time (T) in minutes; that is "C" x "T."

CT = disinfectant concentration x contact time = C (mg/L) x T (minutes)

Therefore, the units of CT are expressed in mg-min/L.

**Example #1:** If a free chlorine residual of 1.8 mg/L is measured at the entry point of the system, after 120 minutes of detention time in the clearwell, what is the CT value in mg-min/L?

CT = disinfectant concentration x contact time

1.8 mg/L  $\times$  120 minutes = 216 mg-min/L

**Example #2:** If a free chlorine residual of 3.0 mg/L is measured at the end of the clearwell after 5 hours of detention time, what is the CT value in mg-min/L?

**Step 1**: Convert 5 hours of detention time to minutes (CT must be in minutes)

Min =  $60 \underline{\text{min}}$  x  $5 \underline{\text{hr}}$  = 300 minutes

**Step 2**: Insert disinfectant residual concentration and contact time (in minutes) into CT equation and multiply the values.

CT = disinfectant concentration x contact time

CT = 3.0 mg/L x 300 min = 900 mg-min/L

<b>Practice Problem:</b> If a free chlorine residual of 2.5 mg/L is measured at the end of the clearwell after 4 hours of detention time, what is the CT value in mg-min/L?			
Step 1: Convert detention time from hours to minutes.			
? Min =			
<b>Step 2:</b> Insert disinfectant residual concentration and contact time (in minutes) into CT equation and multiply the values.			
CT = mg/L x minutes = mg-min/L			

# **Calculating Theoretical Detention Time**

Theoretical Detention Time (minutes) = Volume of Tank (gallons)
Influent Flow (gpm)

Notice the units:

Volume = gallons Time = minutes

All calculations must be converted to those units before you do the math when using it in the CT calculation.

**Example #3:** A sedimentation tank holds 50,000 gallons and the flow into the plant is 500 gpm. What is the detention time in minutes?

Detention Time (mins) =  $\frac{\text{Volume}}{\text{Flow}}$   $\frac{50,000 \text{ gallons}}{500 \text{ gpm}}$  = 100 minutes

Now we are ready to combine this information with the CT calculation in a problem.

**Example #4:** A plant is set at a flow rate of 5 MGD. Water enters into a clearwell that has a volume of 75,000 gallons. The chlorine residual of the outlet end of the tank is 1.2 mg/L. What is the CT in mgmin/L?

**Step 1**: Convert flow rate from MGD to gpm

$$?gal = 1,000,000 gal \times 5 MG \times 1 day = 3472 gal min 1 MG day 1440 mins mins$$

**Step 2:** Calculate detention time using the formula:

Detention Time (mins) =  $\frac{\text{Volume}}{\text{Flow}}$   $\frac{75,000 \text{ gallons}}{3472 \text{ gpm}}$  = 21 minutes

**Step 3:** Insert disinfectant residual concentration and contact time (in minutes) into CT equation and multiply the values.

CT = 1.2 mg/L x 21 minutes = 25 mg-min/L

<b>Practice Problem:</b> A plant is set at a flow rate of 3 MGD. Water enters into a clearwell that has a volume of 50,000 gallons. The chlorine residual of the outlet end of the tank is 1.6 mg/L. What is the CT in mg-min/L?				
Step 1: Convert flow rate from MGD to gpm				
?gal = min				
Step 2: Calculate detention time using the formula:				
Detention Time (mins) = Volume gallons = minutes Flow gpm				
<b>Step 3:</b> Insert disinfection residual concentration and contact time (in minutes) into CT equation and multiply the values.				
CT = mg/L x minutes =mg-min/L				



#### Key points for Chemical Feed Dosage, Chlorine Demand and CT Calculations

- Remember to perform math calculations using the order of operation steps listed in this unit.
- You can use unit cancellation steps to solve for the units you are seeking. Be sure to begin with the numerator unit and cancel unwanted units until only the unknown denominator units remain.
- The Davidson Pie diagram can be used to solve for feed rate (lbs or lbs/day), flow (MGD) or dosage (mg/L) by using the following formulas:
  - 1. Feed Rate, lbs/day = Flow (MGD) or Volume (MG) x Dosage (mg/L) x 8.34 (which is the density of water)
  - 2. Flow (MGD) =  $\frac{\text{Feed Rate (lbs/day)}}{[\text{Dosage (mg/L) x 8.34}]}$
  - 3. Dosage (mg/L) =  $\frac{\text{Feed Rate (lbs/day)}}{[\text{Flow(MGD) x 8.34}]}$
- In order to use any of these formulas, all flows or volumes must be converted to either million gallons per day (MGD) or million gallons (MG).
- If you are calculating a feed rate for a solution that is not 100% pure chlorine (like sodium hypochlorite and calcium hypochlorite), remember to:
  - Calculate the feed rate as if it's 100% pure,
  - Then divide the feed rate of 100% pure chemical by the percent purity of the solution (as a decimal).
- Specific gravity is used to calculate the "active ingredient" weight of a solution which provides you with the available lbs of chlorine/gallon of solution. Once you have the available lbs of chlorine/gallon of solution (i.e., "active ingredient" weight), you can use unit cancellation to determine the number of gallons you need to feed.
- You can use the following equation to calculate chlorine dose, chlorine demand or chlorine residual.
  - o Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual (mg/L)
- To calculate CT values, use the following formulas:
  - CT = disinfectant concentration x contact time = C (mg/L) x T (minutes)
  - o Theoretical Detention Time (minutes) = <u>Volume of Tank (gallons)</u> Influent Flow (gpm)
  - o Remember to convert flow into **qpm** and volume into **qallons**
  - o Remember to convert hours into **minutes** before using the formulas.



# Exercise for Unit 3 – Chemical Feed Dosage, Chlorine Demand and CT Calculations

- 1. In order to use the Feed Rate formula which is lbs/day = Flow or Volume x Dosage x 8.34, name the units of measurement for the flow or volume:
  - a) MGD or MG
  - b) gpm or gallons
  - c) gpd or gallons
  - d) All of the above units can be used
- 2. If you have calculated the feed rate for a solution as if it's 100% pure; but, your solution is a 65% calcium hypochlorite, what value do you use to represent the percent purity (as a decimal)? In other words, what value are you dividing by?
  - a) 65
  - b) 6.5
  - c) 0.65
  - d) 0.0065
- 3. You have determined that you need to feed 100 lbs/day of chlorine. You are using 15% sodium hypochlorite which provides 1.2 lbs/gal available chlorine. In order to convert the "lbs/day" feed rate into "gallons/day," what math step do you use?
  - a) 100 lbs/day X 1.2 lbs/gal
  - b) 100 lbs/day X 0.15
  - c) 100 lbs/day ÷ 1.2 lbs/gal
  - d)  $100 \text{ lbs/day} \div 0.15$
- 4. When calculating a CT value, what units are used in the detention time calculation?
  - a) Volume (MG) ÷ Flow (qpm)
  - b) Volume (Gal) ÷ Flow (gpm)
  - c) Volume (MG) ÷ Flow (MGD)
  - d) Volume (Gal) ÷ Flow (MGD)

#### Additional practice math problems are located in the Appendix.

### Reference

Joanne Kirkpatrick Price, Basic Math Concepts for Water and Wastewater Plant Operators.

# Unit 4 - Chemical Feed

# **Learning Objectives**

- Explain the disinfection regulatory requirements.
- Explain breakpoint chlorination.
- Identify chemical feed equipment and explain important operation and maintenance considerations

# **Regulatory Requirements**

All community water systems (CWSs) are required to provide continuous disinfection. Also, CWSs must meet the disinfection byproducts MCLs. The following regulatory requirements address both disinfection and their associated byproducts with treatment technique requirements, MCLs, and MRDLs.

#### **Surface Water Supplies**

- The disinfection process must achieve 99.9 percent (3 log) inactivation of Giardia cysts and 99.99 percent (4 log) inactivation of enteric viruses. Chlorination equipment must be capable of maintaining a chlorine residual, which achieves a minimum of 1 log Giardia cyst inactivation following filtration.
- This must be determined by CT factors and measurement methods established by EPA. Refer to EPA's Guidance Manual for Compliance with the Filtration and Disinfection Requirements for Public Water Systems Using Surface Water Sources.

#### **Groundwater Supplies**

- Community groundwater systems are required to provide continuous disinfection and at least 4-log treatment of viruses (99.99% removal and/or inactivation).
- Community groundwater systems are required to maintain at each groundwater entry point a minimum residual disinfection concentration approved by DEP to provide 4-log treatment of viruses.
- This applies to groundwater supplies **not** under the influence of surface water intrusion.
- A minimum of 20 minutes of contact time must be provided.

#### **Chlorine Residual Requirements**

- For surface water systems:
  - ▶ Minimum free, combined or chlorine dioxide residual entering the distribution system (i.e., entry point) may not be less than 0.2 mg/L for more than 4 hours, and be maintained as a minimum detectable (0.02 mg/L or greater) residual throughout the distribution system.
  - Samples are taken at the same locations at representative points within the distribution system and at the same time as the total coliform samples.
    - NOTE: Sampling points with nondetectable disinfectant residuals which have heterotrophic plate count (HPC) measurements of less than 500/mL are deemed to be in compliance with the minimum detectable residual requirement.

#### For groundwater systems:

- Minimum free chlorine entering the distribution system (i.e., entry point) no less than 0.40 mg/L or its equivalent as approved by DEP or other minimum residual approved by DEP to provide 4-log treatment of viruses.
- A disinfectant residual acceptable to DEP shall be maintained through the distribution system of the community water system sufficient to assure compliance with the microbiological MCLs.
- ▶ DEP will determine the acceptable residual of the disinfectant considering factors such as type and form of disinfectant, temperature and pH of the water, and other characteristics of the water system.
- ▶ Chlorine residual samples are taken at the same locations at representative points within the distribution system and at the same time as the total coliform samples.
- Chlorine added to water containing organic and inorganic chemicals reacts with these materials to form chlorine compounds. Maximum Contaminant Levels (MCLs) have been established for these disinfection byproduct compounds.

#### **Maximum Contaminant Levels**

Maximum contaminant levels (MCLs) regulations are issued by the USEPA and in Pennsylvania by the DEP. The MCLs list a variety of organic and inorganic chemicals, disinfection by products (DPBs), radionuclides, microbiological contaminants, and turbidity levels that pertain to drinking water. Some example MCLs are listed below.

#### Maximum Residual Disinfectant Level

The maximum residual disinfectant level (MRDL) is the maximum permissible level of a disinfectant added for water treatment that may not be exceeded at the consumer's tap without an unacceptable possibility of aderse health effects.

# <u>Contaminant</u> <u>MCL or MRDL</u>

-	Total Trihalomethanes (TTHMs), a DBP	0.080 mg/L
4	Haloacetic Acids (HAA5), a DBP	0.060 mg/ L
4	Bromate, a DBP	0.010 mg/ L
4	Chlorite, a DBP	1.0 mg/L
4	Benzene	0.005 mg/ L
4	Diquat	0.02 mg/L

♣ Chlorine (as Cl2)
4.0 mg/ L as maximum residual disinfectant level (MRDL)

Secondary contaminant levels are also included since these may affect taste and odor. Some examples are shown below.

<u>Contaminant</u>	<u>MCL</u>
♣ Sulfate	250 mg/ L
🖶 Iron	0.3 mg/ L
<b>∔</b> pH	6.5 – 8.5

#### Minimizing Total Trihalomethane (THM) Formation

Drinking water systems can reduce THM formation in several ways:

- 1. Reduce the organic material before chlorinating the water. Treatment techniques, such as coagulation, sedimentation, and filtration can remove most of the organic materials. However, activated carbon can be used to remove greater amounts of organic material than can be removed by other techniques.
- 2. Optimize chlorine usage.
- Change the point of chlorine addition in the treatment series. If the point of chlorine addition is
  moved to a location <u>after</u> sedimentation or filtration, THM production can be reduced as these
  processes remove part of the organic material.
- 4. Use alternative disinfection methods. Using a mixture of chlorine and ammonia (chloramine) reduces THM formation.

### **Chlorination Mechanics and Terminology**

- The exact mechanism of chlorine disinfection action is not fully known.
  - One theory is that chlorine directly destroys the bacterial cell.
  - Another theory is that chlorine inactivates the enzymes which enable the cells to use food, thus starving the organisms.
- Chlorine demand is the amount of chlorine required to react with all the organic and inorganic material.
- In practice, the chlorine demand is the difference between the amount of chlorine added and the amount remaining after a given contact time.
- Some reactive compounds have disinfecting properties while others do not.
- Chlorine residual (or Total Chlorine) is the total of all compounds with disinfecting properties and any remaining free chlorine.

Chlorine Residual (mg/L) = Combined Chlorine Forms (mg/L) + Free Chlorine (mg/L)

**Combined Chlorine:** When chlorine is added to water, some of the chlorine reacts with nitrate to form chlorine-ammonia compounds. This is referred to as combined chlorine.

Free Chlorine: Chlorine available to inactivate disease-causing organisms

- The presence of measurable chlorine residual indicates that all chemical reactions have been satisfied and that sufficient chlorine is present to kill or inactivate the microorganisms.
- Note: The chlorine residual is not impacted by changes in water temperature.
- Chlorine dose is the amount of chlorine needed to satisfy the chlorine demand plus the amount of chlorine residual needed for disinfection:

Chlorine Dose (mg/L) = Chlorine Demand (mg/L) + Chlorine Residual (mg/L)

### **Breakpoint Chlorination**

- Breakpoint chlorination is the addition of chlorine until all chlorine demand has been satisfied. At this point, further additions of chlorine will result in a free chlorine residual that is directly proportional to the amount of chlorine added beyond the breakpoint. Breakpoint chlorination determines how much chlorine is required for disinfection.
- A residual in the form of free available residual chlorine needs to be provided. This has the highest disinfecting ability.


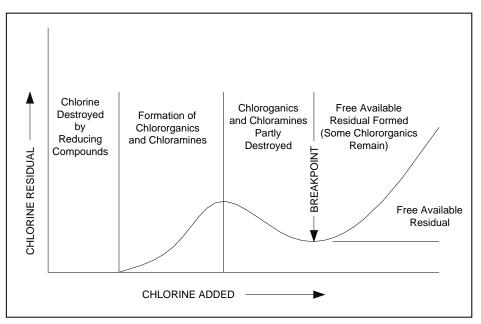


Figure 4.1 Breakpoint Chlorination Curve

### **Chlorine Contact Tank Design**

 The chlorine contact basin design is of critical importance to maximize the effective detention time through the basin, and minimize short-circuiting. Baffling within the basins help minimize shortcircuiting and aids in mixing. Note that the length to width ratio of 25:1 or greater should result in effective storage or baffling efficiencies of 70% or greater.

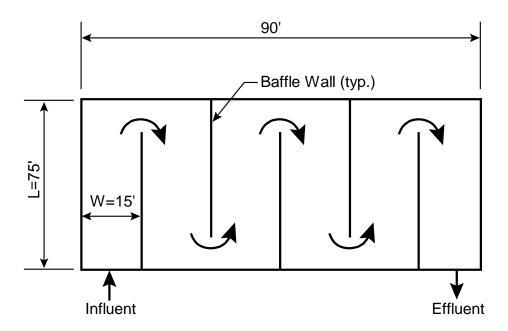

L:W = 
$$\geq 25$$
  
for 70% Baffling Efficiency  
 $\frac{6x75}{15} = 30 \geq 25$ 

Figure 4.2 Chlorine Contact Basin.

### HYPOCHLORITE FEED EQUIPMENT, OPERATION AND MAINTENANCE

### Sodium Hypochlorite

- Sodium hypochlorite is supplied only in solution form.
- It is ready for use as received.
- Sodium hypochlorite is usually fed neat (i.e., at the strength received) if 12.5% strength or less. If the solution strength is greater than 12.5%, it may need to be diluted.

Figure 4.3 shows a typical bulk sodium hypochlorite feed system schematic diagram.

Figure 4.4 depicts a schematic diagram of a typical sodium hypochlorite drum feed system.

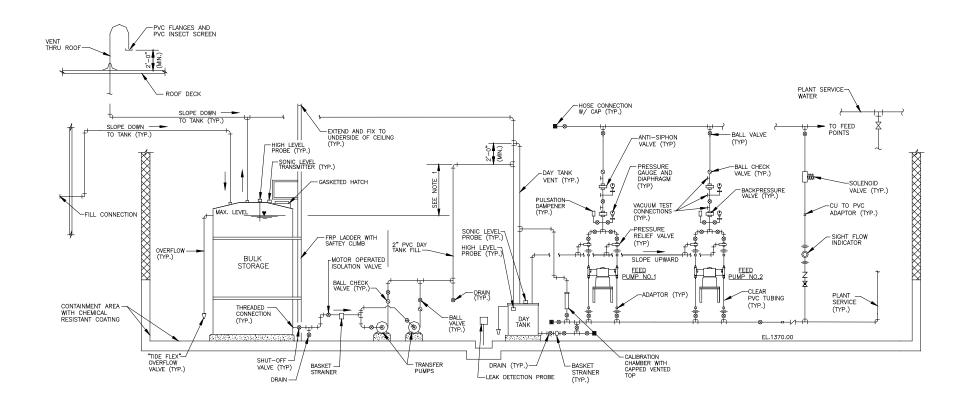


Figure 4.3 Typical Bulk Sodium Hypochlorite Feed System Schematic

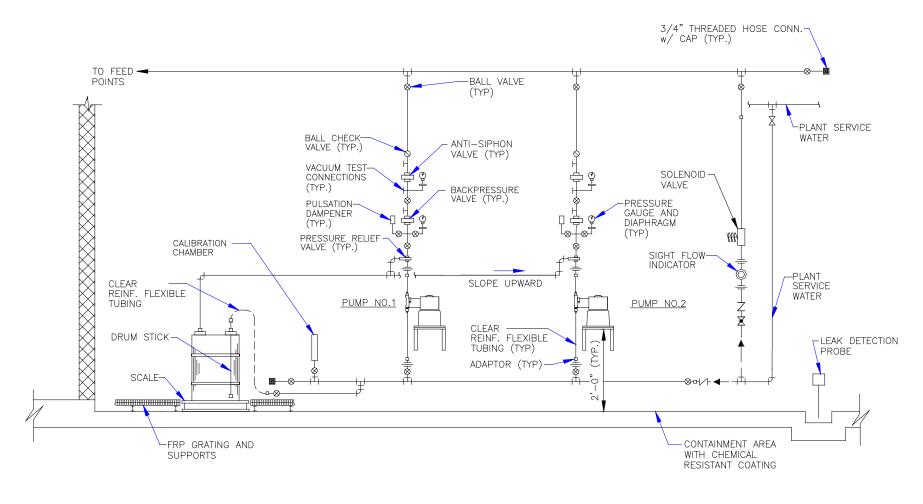


Figure 4.4 Typical Sodium Hypochlorite Drum Feed System Schematic

### Hypochlorite Feed Equipment

With the exception of the type of chemical storage/solution preparation, the equipment for feeding the two forms of hypochlorite is similar. The major components and the purpose of each follow.

#### **Storage/Solution Preparation**

- The <u>bulk storage tank</u> provides a container for the storage of a 30-day minimum supply of sodium hypochlorite solution. The bulk storage tank should provide a minimum volume of 110% of the maximum chemical delivery quantity to minimize the potential for overflowing the tank during chemical deliveries.
- The <u>solution preparation tank</u> provides containers for preparation of a minimum 1-day supply of calcium hypochlorite solution. Two containers are suggested: one in service and one with solution aging to facilitate settling of insoluble compounds.

#### **Scales**

Scales provide an indication of the quantity of chemical remaining, which is useful for chemical inventory control.

#### **Transfer Pumps**

<u>Transfer pumps</u> are used for the transfer of sodium hypochlorite from the bulk storage tank to day tanks.

#### Day Tank

The <u>day tank</u> stores daily chemical required for delivery by feeders, and also monitors chemical usage and provides inventory control.

#### **Chemical Feeder**

The <u>chemical feeder</u> uses positive displacement diaphragm pumps such as the mechanical diaphragm type, the hydraulic diaphragm type, or an electronic solenoid pump. Some chemical feeders are vacuum eductor-type feeders.

#### **Chemical Feed Piping**

- The <u>backpressure valve</u> maintains a constant backpressure on the feed pump discharge.
- The anti-siphon valve prevents backsiphonage of process water into the chemical feed system.
- The pressure relief valve limits the discharge pressure of the feed pump and protects the feed piping.
- The isolation valves permit maintenance of various system components without the need to remove the entire feed system from operation.

### Calcium Hypochlorite

Most plants manually prepare stock batch solutions. Figure 4.5 depicts a typical Calcium Hypochlorite Feed System.

- Usually a one-day supply of 1 to 3 % strength is prepared.
- The proper quantity of HTH is dissolved in a sufficient quantity of water.
- The batch solution should be prepared in a separate container.
  - Allow the solution to stand for 8 to 24 hours before actual use.
  - ▶ Pour or siphon the clear solution into the day tank supplying the feeder.

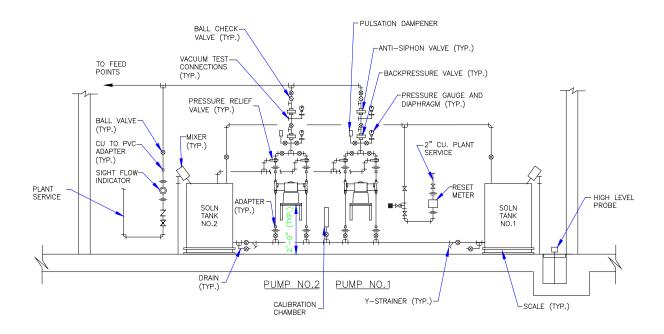


Figure 4.5 Typical Calcium Hypochlorite Feed System

# **On-Site Generated Sodium Hypochlorite**

Typical sodium hypochlorite generation process layout is shown in the following figure.

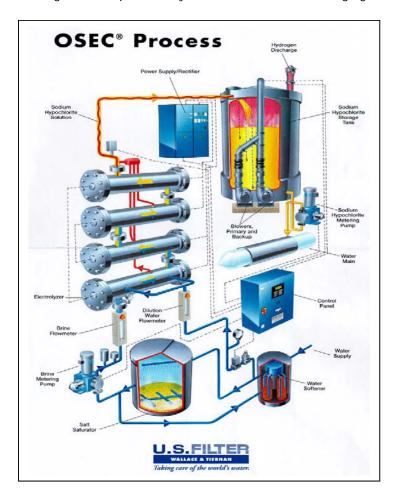


Figure 4.6 On-Site Hypochlorite Generation Process<sup>1</sup>

### HYPOCHLORITE FEED EQUIPMENT, OPERATION AND MAINTENANCE

#### **System Components**

- The <u>brine storage vessel</u> stores salt and softened water where concentrated brine solution is made and stored. (Noted as Salt Saturator in Figure 4.6.)
- The water softener reduces the hardness of the water supply to less than 17 mg/l total hardness.
- The <u>hypochlorite generators</u> are reaction vessels where electrical charge is applied to the brine solution, resulting in the formation of sodium hypochlorite. (Noted as Electrolyzer in Figure 4.6)
- The <u>control system</u> or <u>panel</u> controls the hypochlorite production cycle.
- The <u>storage tanks</u> store hypochlorite solution. Hydrogen is released from the process.

### **Chemical Feed Settings**

**Feed Rate** is the quantity or weight of chemical delivered from a feeder over a given period of time. The chemical feed pump must be calibrated to deliver the selected dosage. A feed rate can have different units of expression, such as lb/hr, lbs/day, mL/min, or gal/day. Often, determining a feed rate involves time and weight conversions.

- Feed pumps are calibrated with the use of a pump calibration curve.
- A new pump calibration curve should be constructed:
  - At least once per year.
  - o If troubleshooting points to the need for a new pump calibration.
  - o If any maintenance is performed on the pump.

## Steps in Developing a Pump Calibration Curve

### Step 1: Determine actual feed pump output.

- Operate feed pump over full operating range
- Determine actual pump output

#### LIQUID FEED PUMP CALIBRATION TABLE

%	Str	oke:			

PUMP SETTING	VOLUME (mL)	TIME (min)	FEED RATE (mL/min)
20			
40			
60			
80			
100			


Here's an example of a completed liquid feed pump calibration table.

Pump Setting (%)	Alum Pumped (ml)	Time (sec)	Feed Rate (ml/min)	Feed Rate (gal/min)
0	0.0	30	0.00	0.000
20	65.6	55	71.56	0.019
40	141.9	59	144.31	0.038
60	249.1	61	245.02	0.065
80	195.2	32	366.00	0.097
100	267.4	35	458.40	0.121

Figure 4.7 Liquid Feeder Pump Calibration Table

### Step 2 – Develop feed pump calibration curve.

- Plot each Feed Rate (mL/min) vs. Pump Speed setting on the graph.
- Connect each of the points together with a straight line.

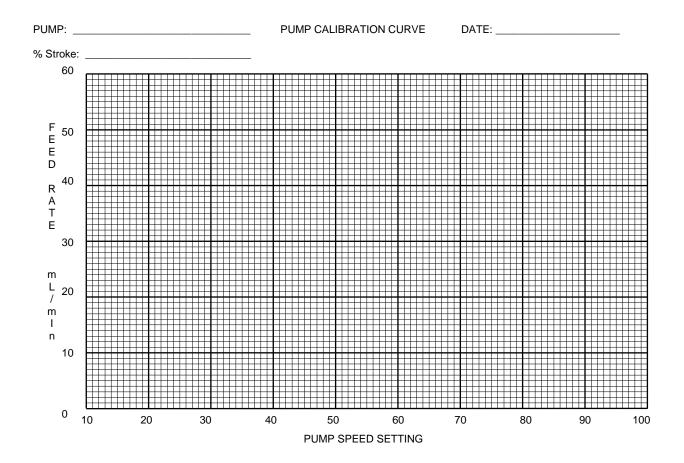

Here's an example of a Dry Feeder Calibration Curve.

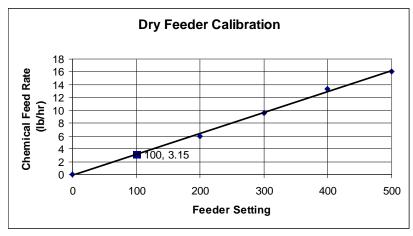


Figure 4.8 - Feeder Calibration Curve

### **Hypochlorite Feed System Operation**

#### **Normal Operation**

Normal operation of the hypochlorite feed system requires regular observation of the facilities and equipment, and a regular preventative maintenance program recommended in the manufacturer's specifications. Exact operating procedures will depend on the type of hypochlorite in use at the facility and on the equipment that is installed at the facility.

The general procedure is as follows:

#### Daily

- Visually inspect the storage and feed areas.
- Verify operation of chemical transfer pumps.
- Read scales, charts or meters at same time each day to determine actual chemical usage. Be sure to record readings for water pumped and actual chemical usage.
- Check chlorine residual in the system and adjust chlorine feed rate as necessary. Verify the proper operation of chemical feed pumps.
- Prepare calcium hypochlorite solution as necessary.
- Look for leaks.

#### Weekly

- Check the chemical dose by verifying proper pump calibration and computing the actual weekly chemical dosage.
- Check the entire system for problems.
- Clean the area.
- Verify the chemical supply on-hand and order as necessary.

#### Monthly

Clean and lubricate equipment in accordance with manufacturer's recommendations.

#### **Abnormal Operation**

In the event of an abnormal operation, be sure to inform your supervisor of the problem.

#### Low Chlorine Residual

- Determine the actual chlorine residual in the laboratory and compare with the residual analyzer reading. Then recalibrate the analyzer appropriately.
- If the analyzer is properly calibrated, check the following:
  - ▶ The sample pump operation.
  - ▶ The feed pump operation.
  - ► The control system, if it is on automatic control. Operate in manual control mode if necessary.
  - The water chlorine demand. Increase the feed rate if necessary. Add additional feed pumps on line if demand is higher than can be provided by a single unit.

#### Chemical Pump Not Operating

- Verify the hypochlorite supply availability.
- Start the spare pump to maintain system chlorination.
- Check the electrical supply equipment, such as electrical connections, circuit breakers and control equipment.
- Check for blockages:
  - In the solution tank.
  - In the valves, both manual and electrically controlled.
  - In feed lines such as the feed pump suction lines and feed pump discharge lines.



### Key points for Unit 4 – Chemical Feed.

- Community water suppliers have both minimum and maximum chlorine residual requirements to meet according to their source water classification. The minimum and maximum levels are listed here:
  - Minimum entry point and distribution system requirements for surface water systems: Surface water suppliers are required to have a minimum free, combined or chlorine dioxide residual entering the distribution system (i.e., entry point) that may not be less than 0.2 mg/L for more than 4 hours. Additionally, surface water suppliers are required to maintain a minimum detectable (0.02 mg/L or greater) residual throughout the distribution system.
  - Minimum entry point and distribution system requirements for groundwater systems: Groundwater suppliers are required to have a minimum free chlorine residual entering the distribution system (i.e., entry point) no less than 0.40 mg/L or its equivalent as approved by DEP or other minimum residual approved by DEP to provide 4-log treatment of viruses.
    - Additionally, groundwater suppliers are required to maintain a disinfectant residual acceptable to DEP throughout the distribution system sufficient to assure compliance with the microbiological MCLs. DEP will determine the acceptable residual of the disinfectant considering factors such as type and form of disinfectant, temperature and pH of the water, and other characteristics of the water system.
  - <u>Maximum</u> residual disinfectant level requirements within the distribution system for all system types: Surface water and groundwater suppliers are required comply with a maximum residual disinfectant level no greater than 4.0 mg/L as chlorine. Compliance is based on a running annual average, computed quarterly, of monthly averages of all samples collected within the distribution system.
- ♣ Drinking water systems can reduce THM formation in several ways:
  - Reduce the organic material before chlorinating the water. Treatment techniques, such as
    coagulation, sedimentation, and filtration can remove most of the organic materials.
    However, activated carbon can be used to remove greater amounts of organic material
    than can be removed by other techniques.
  - Optimize chlorine usage.
  - Change the point of chlorine addition in the treatment series. If the point of chlorine addition is moved to a location **after** sedimentation or filtration, THM production can be reduced as these processes remove part of the organic material.
  - Use alternative disinfection methods. Using a mixture of chlorine and ammonia (chloramine) reduces THM formation.
- Chlorine demand is the amount of chlorine required to react with all the organic and inorganic material.

- Chlorine residual is the total of all chlorine compounds with disinfecting properties and any remaining free chlorine.
- Chlorine dose is the amount of chlorine needed to satisfy the chlorine demand plus the amount of chlorine residual needed for disinfection.
- ♣ Breakpoint chlorination is the addition of chlorine until all chlorine demand has been satisfied. It is used to determine how much chlorine is required for disinfection. At this point, further additions of chlorine will result in a free chlorine residual that is directly proportional to the amount of chlorine added beyond the breakpoint.
- The chlorine contact basin design is of critical importance to maximize the effective detention time through the basin, and minimize short-circuiting. Groundwater systems now required to provide 4-log treatment of viruses may need to install baffles within the chlorine contact tanks to increase detention time and reduce short-circuiting.
- Sodium hypochlorite is supplied in solution form and typically it is used as received.
- Sodium hypochlorite can be generated on site by using special equipment to supply an electric charge to a brine solution.
- After a chlorine dosage has been calculated, it's important to develop a chlorine feed pump calibration curve that determines the chlorine delivery feed rate as it relates to the pump setting. This calibration process assures that the pump is delivering the proper chlorine dosage.
- Hypochlorite feed system equipment should be inspected daily for proper operation. Follow the maintenance recommendations that the pump manufacturer provides.
- Check the chlorine residual in the system daily and adjust chlorine feed rate as necessary.



# Exercise for Unit 4 – Chemical Feed

Ι.	inactivation of Giardia cysts and percent (4 log) inactivation of enteric viruses.
2.	Chlorine residual samples are taken at representative points within the distribution system. These samples are taken at the same time and at the same location as the coliform samples are taken.
	a True b False
3.	The is the maximum permissible level of a disinfectant added for water treatment that may not be exceeded at the consumer's tap without an unacceptable possibility of aderse health effects.
4.	List one way a water supplier can reduce THM formation:
5.	Explain what breakpoint chlorination is.
6.	The chlorination curve can be used to determine how much chlorine is required for disinfection.
7.	Chlorine dose = (mg/L) + (mg/L).
8.	A tank stores daily amounts of chemical required for delivery by feeders.
9.	Calcium hypochlorite solutions are typically prepared with a to % strength.
10.	A pump calibration curve plots feed rate delivery versus the pump
11.	In the event of an abnormal operation, be sure to inform your about the problem.

<sup>1</sup> Courtesy of U.S. Filter, Wallace & Tiernan Products (18 June 2003).

### A Typical Chlorine MSDS Sheet

-- SODIUM HYPOCHLORITE, 7-15 %, CPE 622680 OLIN CORPORATION \_\_\_\_\_\_ MSDS Safety Information \_\_\_\_\_\_ FSC: 6810 NIIN: 01-029-5565 MSDS Date: 04/23/1997 MSDS Num: BVFLX Product ID: SODIUM HYPOCHLORITE, 7-15 %, CPE 622680 MFN: 02 Responsible Party Cage: 99530 Name: OLIN CORPORATION Address: 501 MERRITT 7 Box: 4500 City: NORWALK (FORMALLY IN STAMFORD, CT) CT 06856-4500 Info Phone Number: 203-750-3000/203-750-3543 Emergency Phone Number: 800-654-6911/203-356-2000 Preparer's Name: UNKNOWN Review Ind: Y Published: Y \_\_\_\_\_\_ Contractor Summary \_\_\_\_\_\_ Cage: 03JX8 Name: ENVIROTROL INC (504-736-9041) Address: UNKNOWN Box: UNKNOW City: UNKNOWN NK 00000 Phone: UNKNOWN Cage: 99530 Name: OLIN CORPORATION Address: 501 MERRITT 7 Box: 4500 City: NORWALK CT 06856-4500 Phone: 203-750-3000/800-511-MSDS Cage: 0STM5 Name: VOPAK USA INC Address: 6100 CARILLON POINT City: KIRKLAND WA 98033-7357 Phone: 425-889-3400/425-889-3617 \_\_\_\_\_\_ Item Description Information \_\_\_\_\_\_ Item Manager: S9G Item Name: SODIUM HYPOCHLORITE SOLUTION Specification Number: NONE Type/Grade/Class: NONE Unit of Issue: DR Quantitative Expression: 0000000055GL UI Container Qty: 0 Type of Container: DRUM

\_\_\_\_\_\_

Ingredients

-----

Cas: 7681-52-9 RTECS #: NH3486300

Name: SODIUM HYPOCHLORITE (CERCLA); AVAILABLE CHLORINE 5%

% Wt: 7 - 15

Other REC Limits: NONE RECOMMENDED

OSHA PEL: NOT ESTABLISHED ACGIH TLV: NOT ESTABLISHED

EPA Rpt Qty: 100 LBS DOT Rpt Qty: 100 LBS

-----

Cas: 1310-73-2 RTECS #: WB4900000

Name: SODIUM HYDROXIDE (CERCLA)

% Wt: 0.5-2.5

Other REC Limits: NONE RECOMMENDED

OSHA PEL: 2 MG/M3

ACGIH TLV: C 2 MG/M3; 9596 EPA Rpt Qty: 1000 LBS DOT Rpt Qty: 1000 LBS

\_\_\_\_\_

Cas: 7647-14-5 RTECS #: VZ4725000 Name: SODIUM CHLORIDE

% Wt: 5 - 11

Other REC Limits: NONE RECOMMENDED

OSHA PEL: NOT ESTABLISHED
ACGIH TLV: NOT ESTABLISHED

Cas: 7732-18-5 RTECS #: ZC0110000

Name: WATER % Wt: BALANCE

Other REC Limits: NONE RECOMMENDED

OSHA PEL: NOT RELEVANT ACGIH TLV: NOT RELEVANT \_\_\_\_\_\_

Health Hazards Data

-----

LD50 LC50 Mixture: LD50 (ORAL, RAT) 3000-5000 MG/KG

Route Of Entry Inds - Inhalation: YES

Skin: NO

Ingestion: YES

Carcinogenicity Inds - NTP: NO

IARC: NO OSHA: NO

Effects of Exposure: TARGET ORGANS: EYES, SKIN, RESPIRATORY AND GASTROINTESTINAL TRACTS. ACUTE- CORROSIVE. MAY CAUSE EYE AND SKIN IRRITATION & BURNS. VAPORS ARE IRRITATING TO UPPER RESPIRATORY TRACT. MAY CAUSE BURNS. HARMFUL IF INHALED/SWALLOWED. MAY CAUSE GASTROINTESTINAL TRACT BURNS. CHRONIC-MAY CAUSE LUNG DAMAGE, SKIN ULCERATION.

Explanation Of Carcinogenicity: NONE

Signs And Symptions Of Overexposure: SEVERE IRRITATION, TEARING, NAUSEA, VOMITING, WHEEZING, SHORTNESS OF BREATH, CHEST PAIN, CORNEAL DAMAGE, TISSUE DESTRUCCTION, SWELLING

Medical Cond Aggravated By Exposure: ASTHMA, RESPIRATORY AND CARDIOVASCULR DISEASES

First Aid: GET MEDICAL HELP IF SYMPTOMS PERSIST. INHALED: MOVE TO FRESH AIR. PROVIDE CPR/OXYGEN IF NEEDED. EYES/SKIN: IMMEDIATELY FLUSH WITH WATER FOR 15 MINUTES. HOLD EYELIDS OPEN. ORAL: DO NOT INDUCE VOMITING. IF CONSCIOUS, DRINK PLENTY OF WATER. SEEK IMMEDIATE MEDICAL ATTENTION. IF VOMITING OCCURS, KEEP HEAD BELOW HIPS. DO NOT GIVE ANYTHING BY MOUTH TO AN UNCONSCIOUS PERSON.

\_\_\_\_\_\_

Handling and Disposal

\_\_\_\_\_\_

Spill Release Procedures: FLUSH TO SEWER WITH LARGE AMOUNT OF WATER IF PERMITTED. OTHERWISE, ABSORB SPILL WITH INERT MATERIAL SUCH AS VERMICULITE. PLACE IN A CONTAINER FOR DISPOSAL. CLEAN AREA THOROUGHLY TO REMOVE RESIDUAL CONTAMINATION.

Neutralizing Agent: WEAK ACIDS

Waste Disposal Methods: DISCHARGE, TREATMENT OR DISPOSAL IS SUBJECT TO FEDERAL, STATE OR LOCAL REGULATIONS. FLUSH TO SEWER WITH LARGE AMOUNT OF WATER, IF ALLOWED. SINCE EMPTIED CONTAINERS RETAIN PRODUCT RESIDUE, FOLLOW LABEL WARNINGS EVEN AFTER CONTAINER IS EMPTIED.

Handling And Storage Precautions: STORE IN A COOL PLACE AWAY FROM DIRECT SUNLIGHT AND INCOMPATIBLE MATERIALS.

Other Precautions: DO NOT GET IN EYES, ON SKIN OR ON CLOTHING. AVOID INHALATION OF VAPORS OR MISTS. KEEP OUT OF REACH OF CHILDREN. OBEY HAZARD WARNING LABEL. USE WITH ADEQUATE VENTILATION. DO NOT CONTAMINATE ENVIRONMENT.

\_\_\_\_\_\_ Fire and Explosion Hazard Information \_\_\_\_\_\_ Flash Point Text: NONE Lower Limits: NOT RELEVANT Upper Limits: NOT RELEVANT Extinguishing Media: SMALL FIRE: DRY CHEMICAL, CARBON DIOXIDE, WATER SPRAY. LARGE FIRE: WATER FOG IN FLOODING AMOUNT. Fire Fighting Procedures: WEAR PROTECTIVE CLOTHING AND NIOSH-APPROVED SELF-CONTAINED BREATHING APPARATUS. COOL FIRE -EXPOSED CONTAINER WITH WATER SPRAY. Unusual Fire/Explosion Hazard: MAY EMIT CHLORINE GAS. \_\_\_\_\_\_ Control Measures \_\_\_\_\_\_ Respiratory Protection: NONE NORMALLY NEEDED. IF WORKING IN CONFINED AREAS, IF EXCESSIVE MISTING IS EXPECTED, WEAR NIOSH-APPROVED RESPIRATOR (REFER TO 29 CFR 1910.134) Ventilation: MECHANICAL (GENERAL/LOCAL EXHAUST) Protective Gloves: RUBBER Eye Protection: SAFETY GLASSES WITH SIDE SHIELD/GOGGLES Other Protective Equipment: EYE WASH STATION, QUICK DRENCH SHOWER AND IMPERVIOUS CLOTHING Work Hygienic Practices: OBSERVE GOOD INDUSTRIAL HYGIENE PRACTICES AND RECOMMENDED PROCEDURES. WASH AFTER HANDLING AND BEFORE EATING OR DRINKING. Supplemental Safety and Health: FORMULA CHANGED. FOR PREVIOUS FORMULATION, SEE PNI A, SAME NSN. \_\_\_\_\_\_ Physical/Chemical Properties \_\_\_\_\_\_ NRC/State LIC No: NOT RELEVANT Vapor Pres: UNKNOWN Vapor Density: UNKNOWN Spec Gravity: 1.08 - 1.26 PH: >11 Viscosity: UNKNOWN Evaporation Rate & Reference: UNKNOWN Solubility in Water: MISCIBLE Appearance and Odor: GREENISH-YELLOW LIQUID; CHLORINE ODOR Percent Volatiles by Volume: 88- 95 Corrosion Rate: UNKNOWN \_\_\_\_\_\_ Reactivity Data \_\_\_\_\_\_ Stability Indicator: YES Stability Condition To Avoid: HIGH HEAT, SUNLIGHT, ULTRA-VIOLET LIGHT Materials To Avoid: ACIDS, OXIDIZING AGENTS, IRON, COPPER, AMMONIUM COMPOUNDS, ORGANICS Hazardous Decomposition Products: CHLORINE GAS Hazardous Polymerization Indicator: NO Conditions To Avoid Polymerization: NOT RELEVANT \_\_\_\_\_\_ Toxicological Information \_\_\_\_\_\_

\_\_\_\_\_\_ Ecological Information \_\_\_\_\_\_ \_\_\_\_\_\_ MSDS Transport Information \_\_\_\_\_\_ \_\_\_\_\_\_ Regulatory Information \_\_\_\_\_\_ \_\_\_\_\_\_ Other Information \_\_\_\_\_\_ \_\_\_\_\_\_ Transportation Information \_\_\_\_\_\_ Responsible Party Cage: 99530 Trans ID NO: 100231 Product ID: SODIUM HYPOCHLORITE, 7-15 %, CPE 622680 MSDS Prepared Date: 04/23/1997 Review Date: 01/27/1998 MFN: 2 Radioactivity: NOT RELEVANT Net Unit Weight: 468-546 LBS Multiple KIT Number: 0 Review IND: Y Unit Of Issue: DR Container QTY: 0 Type Of Container: DRUM Additional Data: PROPER SHIPPING NAME, HAZARD CLASS, UN ID NUMBER AND PACKAGING GROUP PER MSDS. REPORTABLE QUANTITY ( RQ) 100 LBS \_\_\_\_\_\_ Detail DOT Information \_\_\_\_\_ DOT PSN Code: HNU DOT Proper Shipping Name: HYPOCHLORITE SOLUTION Hazard Class: 8 UN ID Num: UN1791 DOT Packaging Group: III Label: 8 Special Provision: B104,N34,T7 Packaging Exception: 154 Non Bulk Pack: 203 Bulk Pack: 241 Max Qty Pass: 5 L Max Qty Cargo: 60 L Vessel Stow Req: B Water/Ship/Other Req: 26

\_\_\_\_\_\_ Detail IMO Information \_\_\_\_\_\_ IMO PSN Code: IKL IMO Proper Shipping Name: HYPOCHLORITE SOLUTION IMDG Page Number: 8186 UN Number: 1791 UN Hazard Class: 8 IMO Packaging Group: II/III Subsidiary Risk Label: -EMS Number: 8-08 MED First Aid Guide NUM: 741 \_\_\_\_\_\_ Detail IATA Information \_\_\_\_\_\_ IATA PSN Code: NYC IATA UN ID Num: 1791 IATA Proper Shipping Name: HYPOCHLORITE SOLUTION + IATA UN Class: 8 IATA Label: CORROSIVE UN Packing Group: III Packing Note Passenger: 819 Max Quant Pass: 5L Max Quant Cargo: 60L Packaging Note Cargo: 821 \_\_\_\_\_ Detail AFI Information \_\_\_\_\_\_ AFI PSN Code: NYC AFI Proper Shipping Name: HYPOCHLORITE SOLUTIONS AFI PSN Modifier: WITH MORE THAN 5% BUT LESS THAN 16% AVAILABLE CHLORINE AFI Hazard Class: 8 AFI UN ID NUM: UN1791 AFI Packing Group: III Special Provisions: P5, N34 Back Pack Reference: A12.3

\_\_\_\_\_\_

HAZCOM Label

-----

Product ID: SODIUM HYPOCHLORITE, 7-15 %, CPE 622680

Cage: 99530

Company Name: OLIN CORPORATION

Street: 501 MERRITT 7

PO Box: 4500 City: NORWALK CT Zipcode: 06856-4500

Health Emergency Phone: 800-654-6911/203-356-2000

Label Required IND: Y

Date Of Label Review: 12/09/1997

Status Code: C

MFG Label NO: UNKNOWN
Label Date: 12/09/1997
Year Procured: 1998
Origination Code: G
Eye Protection IND: YES
Skin Protection IND: YES
Signal Word: WARNING

Respiratory Protection IND: YES

Health Hazard: Moderate Contact Hazard: Moderate

Fire Hazard: None

Reactivity Hazard: None

Hazard And Precautions: TARGET ORGANS:EYES, SKIN, RESPIRATORY & GI TRACTS. ACUTE- CORROSIVE. MAY CAUSE EYE & SKIN IRRITATION & BURNS. VAPORS IRRITATING TO RESPIRATORY TRACT. HARMFUL IF INHALED/SWALLOWED. MAY CAUSE GI TRACT BURNS. CHRONIC- MAY CAUSE LUNG DAMAGE. STORE AWAY FROM INCOMPATIBLES. ABSORB SPILL WITH VERMICULITE. PLACE IN A CONTAINER FOR DISPOSAL. CLEAN AREA TO REMOVE RESIDUAL CONTAMINATION. FIRST AID- GET MEDIC AL HELP IF SYMPTOMS PERSIST. INHALED:MOVE TO FRESH AIR. PROVIDE CPR/OXYGEN IF NEEDED. EYES/SKIN:IMMEDIATELY FLUSH WITH WATER FOR 15 MINUTES. HOLD EYELIDS OPEN. ORAL:DO NOT INDUCE VOMITING. IF CONSCIOUS, DRINK PLENTY OF WATER. CALL PHYSICIAN AT ONCE.

\_\_\_\_\_\_

Disclaimer (provided with this information by the compiling agencies): This information is formulated for use by elements of the Department of Defense. The United States of America in no manner whatsoever expressly or implied warrants, states, or intends said information to have any application, use or viability by or to any person or persons outside the Department of Defense nor any person or persons contracting with any instrumentality of the United States of America and disclaims all liability for such use. Any person utilizing this instruction who is not a military or civilian employee of the United States of America should seek competent professional advice to verify and assume responsibility for the suitability of this information to their particular situation regardless of similarity to a corresponding Department of Defense or other government situation.

#### **Hypochlorite Practice Math Problems**

- 1. In 24 hours, 4.2 gallons of 12% hypochlorite solution is fed. How much (in gallons) would you have to use if the concentration was 7%?
  - a. 2.4 gallons
  - b. 5 gallons
  - c. 7.2 gallons
  - d. 10.1 gallons
- 2. In 10 hours, you feed 3.5 gallons of 12.5% hypochlorite solution. How many gallons would you have to use if the concentration is 6%?
  - a. 7.3 gallons
  - b. 3.7 gallons
  - c. 1.4 gallons
  - d. 0.9 gallons

- 3. A plant flow is set at 2.2 MGD. The chlorine dose needs to be 2.0 mg/L. How many pounds of 12.5% sodium hypochlorite can the system expect to use each day?
  - a. 294 pounds
  - b. 37 pounds
  - c. 0.3 pounds
  - d. 30 pounds

- 4. A system needs to determine how many pounds of 12.5% sodium hypochlorite they will use when the plant is set at a flow of 375,000 gpd. They need to maintain a chlorine dosage of 1.5 mg/L.
  - a. 4.7 pounds
  - b. 47 pounds
  - c. 37.5 pounds
  - d. 3.8 pounds
- 5. A tank contains 575,000 gallons of water. This water is to receive a chlorine dose of 2.2 mg/L. How many pounds of calcium hypochlorite (65% available) will be required for this disinfection?
  - a. 16.2 pounds
  - b. 10,550 pounds
  - c. 10.55 pounds
  - d. 0.162 pounds
- 6. Calculate the amount of chlorine required to dose an 800,000 gallon storage tank to a dose of 5 mg/L. You believe it is best to use granular calcium hypochlorite and the product information indicates it is 68% chlorine.
  - a. 25 pounds
  - b. 33 pounds
  - c. 49 pounds
  - d. 60 pounds

- 7. After cleaning, a system needs to disinfect a 750,000 gallon storage tank. The system has decided on a dose of 25 mg/L. How many pounds of 68% calcium hypochlorite would they need to purchase for the job?
  - a. 30 pounds
  - b. 75 pounds
  - c. 156 pounds
  - d. 230 pounds
- 8. How many pounds of chlorine would be needed to disinfect a 700,000 gallon tank that is  $^{2}/_{3}$  full? It has been determined it needs dosed to 5 mg/l.
  - a. 19.5 lbs
  - b. 29.2 lbs
  - c. 9.7 lbs
  - d. 39.5 lbs

- 9. A treatment plant uses sodium hypochlorite (12%) to disinfect the water. The target dose is 0.8 mg/L. They treat 250,000 gpd. How many pounds of sodium hypochlorite will they need to feed?
  - a. 14 pounds
  - b. 10 pounds
  - c. 4.3 pounds
  - d. 1.7 pounds

- 10. A treatment plant uses 12.5% hypochlorite to disinfect the water. The required hypochlorite dosage is 2 mg/L and the plant flow is 300,000 gpd. How many gallons of 12.5% hypochlorite are required (12.5% hypo has 1.25 lbs/gal available chlorine)?
  - a. 5.1 gallons
  - b. 4 gallons
  - c. 12 gallons
  - d. 400 gallons

- 11. The chlorine demand of the water is 1.4 mg/L. If the desired chlorine residual is 0.5 mg/L, what is the desired chlorine dose, in mg/L?
  - a. 0.9 mg/L
  - b. 1.3 mg/L
  - c. 1.5 mg/L
  - d. 1.9 mg/L

- 12. At a flow rate of 375 gpm, how many pounds of 67% calcium hypochlorite would be required to maintain a 0.8 mg/L chlorine residual in the finished water if the chlorine demand is 0.8 mg/L?
  - a. 3.6 pounds
  - b. 5.4 pounds
  - c. 7.2 pounds
  - d. 10.8 pounds

- 13. A system needs to maintain a chlorine residual of 0.8 mg/L. The chlorine demand is 1.2 mg/L and the plant flow is set at 500 gpm. How many pounds of 65% calcium hypochlorite would the system expect use in 8 hours?
  - a. 12 pounds
  - b. 6 pounds
  - c. 9 pounds
  - d. 11 pounds

- 14. How many gallons of 15% sodium hypochlorite (1.4 lbs/gal available chlorine) are required to treat 750,000 gpd with a desired chlorine residual of 0.8 mg/L and a demand of 0.6 mg/L?
  - a. 2 gallons
  - b. 4 gallons
  - c. 6 gallons
  - d. 8 gallons

- 15. How many gallons of 12½% sodium hypochlorite are required to treat 750,000 gpd with a desired residual of 1.2 mg/L and a chlorine demand of 0.5 mg/L? (note, 12½% has 1.2 lbs/gal available chlorine)
  - a. 7 gal/day
  - b. 9 gal/day
  - c. 11 gal/day
  - d. 13 gal/day

- 16. A plant is set at a flow rate of 3 MGD. Water enters into a clearwell that has a volume of 55,000 gallons. The chlorine residual of the outlet end of the tank is 1.4 mg/L. What is the CT in mg-min/L?
  - a. 25
  - b. 180
  - c. 37
  - d. 203
- 17. A free chlorine residual of 1.7 mg/L is measured at the end of the clearwell after 4 hours of detention time, what is the CT value in mg-min/L?
  - a. 6.8 mg-min/L
  - b. 80 mg-min/L
  - c. 240 mg-min/L
  - d. 408 mg-min/L

- 18. A plant is set at a flow rate of 2 MGD. Water enters into a clearwell that has a volume of 50,000 gallons. The chlorine residual of the outlet end of the tank is 0.9 mg/L. What is the CT in mg-min/L?
  - a. 11 mg-min/L
  - b. 22.5 mg-min/L
  - c. 32 mg-min/L
  - d. 44.5 mg-min/L

- 19. If the free chlorine residual of 1.8 mg/L is measured at the end of the clearwell after 3 hour of detention time, what is the CT value in mg-min/L?
  - a. 5 mg-min/L
  - b. 75 mg-min/L
  - c. 176 mg-min/L
  - d. 324 mg-min/L

- 20. If the free residual of 1.8 mg/L is measured at the entry point of the system, after 5 hours of detention time, what is the CT value in mg-min/L?
  - a. 16 mg-min/L
  - b. 95 mg-min/L
  - c. 275 mg-min/L
  - d. 540 mg-min/L

- 21. In 18 hours, you use 6 gallons of 15% sodium hypochlorite. How much (gallons) would you have to use if the concentration is 7%.
  - a. 3 gallons
  - b. 10 gallons
  - c. 13 gallons
  - d. 16 gallons

- 22. A system is using 12.5% sodium hypochlorite to disinfect at a dose of 1.5 mg/L. When the plant flow is set at 550,000 gpd, how many pounds of sodium hypochlorite should they expect to use?
  - a. 7 pounds
  - b. 35 pounds
  - c. 55 pounds
  - d. 155 pounds

A Module 25 answer key is available at the following website link: http://www.depweb.state.pa.us/operatorcenter/

In the right hand menu click "Training", then "DEP Training Modules"